



Axion XQ

Manual

Content

Specifications

Description

Package Contents

Features

Components and Controls

Button Operation

Using the Battery Pack

- Precautions

- Recommendations for Battery Use

- Battery Charging

- Battery Installation

External Power Supply

Powering on and Image Settings

Microbolometer Calibration

Discrete Digital Zoom

Status Bar

Quick Menu Functions

Main Menu Functions

- Enter the Main Menu

- Mode

- Image Detail Boost

- Color Modes

- Calibration Mode

- Microphone

- PiP Mode

- Icon Brightness

- General Settings

- Wi-Fi Activation

- Wi-Fi Settings

- Defective Pixel Repair

 - Defective Pixel Repair

 - Restore Default Pixel Map

- Device Information

Video Recording and Photography
Wi-Fi Function
Stadiametric Rangefinder
Display-Off Function
PiP Function
Stream Vision
Firmware Update
USB Connection
Installing the Device on a Tripod
Technical Inspection
Technical Maintenance and Storage
Troubleshooting
Legal Compliances and Disclaimers

Specifications

You can learn more about the main parameters [here](#).

XQ38

Model	XQ38
SKU	77427
Microbolometer	
Type	uncooled
Resolution, Pixels	384x288
Pixel Pitch, μm	17
Frame Rate, Hz	50
Optical Characteristics	
Optical Magnification, x	3.5
Smooth Digital Zoom	3.5-14
Digital Zoom, x	2/4
Lens Focus, mm	38
Relative Aperture, D/f'	1.2
Minimum Focus Distance, m	3
Eye Relief Diameter, mm	3.5

Angular Field of View (Horizontal x Vertical), degree	9.8x7.4
Linear Field of View, m at 100 m	17.2
Eyepiece Focus Range, Diopter	+4 / -5
Detection Distance for Deer-Sized Objects, m/y	1350/1476
Display	
Type	AMOLED
Resolution, Pixels	1024x768
Operational Characteristics	
Power Supply, V	3 - 4.2
Battery Type/Capacity/Nominal Output Voltage	APS 5 Li-ion Battery Pack / 4900 mAh / DC 3.7 V
External Power Supply	5-15 V (USB Type-C)
Battery Run Time at t=22°C, hours	6
Degree of Protection, IP Code (IEC60529)	IPX7
Stream Vision Compatible	Yes
Operating Temperature Range, °C	-25 to +40

Dimensions, mm/inch	167x49x73 / 6.57x1.93x2.87
Weight (without battery), kg/oz	0.35/12.35
Video Recorder	
Photo/Video Resolution, Pixels	1024x768
Video/Photo Format	.mp4 / .jpg
Built-in Memory	16 GB
Wi-Fi Channel*	
Frequency	2.4 GHz
Standard	802.11 b/g

*Reception range may vary depending on various factors: obstacles, other Wi-Fi networks.

Description

Axion XQ thermal imaging monoculars are designed for use both at night-time and during the day and provide exceptional image quality even in adverse weather conditions (fog, smog, rain) and beyond obstacles like branches, tall grass, dense foliage, etc. known to hinder target detection.

Unlike night-vision devices based on electron-optical converters, thermal imaging devices do not need an external light source and are resistant to bright light.

Axion XQ thermal imagers are designed for various applications including hunting, observation, security, terrain orientation, search and rescue operations, etc.

To get started, see the sections:

Battery Charging

Battery Installation

Powering on and Image Setting

Stream Vision

Package Contents

- Axion XQ thermal monocular
- APS 5 rechargeable battery
- 2 battery-locking covers
- Battery charger
- Power adapter
- USB Type-C cable
- Carrying case
- Hand strap
- Quick reference user manual
- Lens cleaning cloth
- Warranty information
- Tripod adapter

Features

- 384x288 microbolometer sensor resolution
- 17-micron pixel pitch
- 1024x768 AMOLED display resolution
- Compact and lightweight
- Functional and ergonomic design
- 8-color display palette
- 3 calibration modes: Manual, Semi-Automatic, Automatic
- Detection range up to 1350 m/1475 yds
- Smooth digital zoom 3.5-14x
- 4 observation modes: Forest, Rocks, Identification, User
- Stadiametric Rangefinder
- Display-Off function
- Defective pixel repair
- Updatable firmware
- Wide operating temperature range (-25°C to +40°C)
- Fully waterproof (IPX7 rated)
- Tripod mount


Video/Audio Recording

- Built-in video and sound recorder
- Integration with iOS and Android devices
- Wi-Fi remote control and viewing using a smartphone

Battery Pack



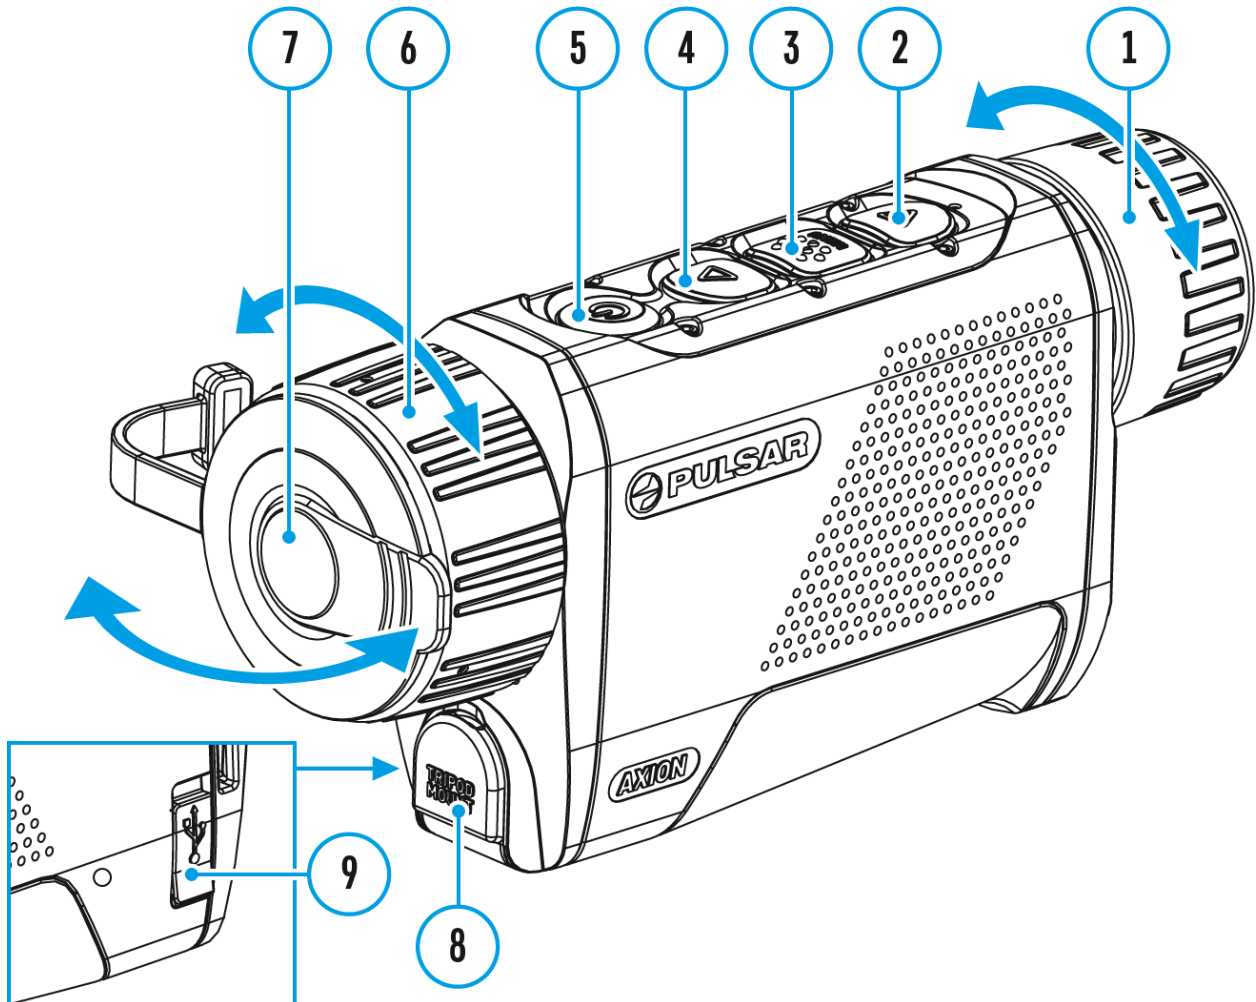

- Quick Change Li-Ion Battery Pack APS 5
- Charging from USB Power Bank
- Quick-Charge power delivery

Components and Controls

























1. Eyepiece focus ring
2. DOWN/REC button
3. MENU button
4. UP/ZOOM button
5. Power ON/OFF/CALIBRATION button
6. Lens focus ring
7. Lens cover
8. Tripod adapter socket
9. USB Type-C connector

LED indicator displays the current status of the device:

LED Indicator	Operating Mode
	Device is turned on
	The device is turned on/video recording
	The device is turned on/battery charge < 10%
	The device is turned on/video recording/battery charge < 10%

Button Operation

Operation	Button
Power device on	 short press
Power device off	 long press for 3 secs
Turn display off	 long press for less than 3 secs
Turn display on	 short press
Calibrate the microbolometer	 short press
Switch observation modes	 short press
Control discrete digital zoom	 long press
Video Recorder	Button
Start/pause/resume video recording	 short press
Stop video recording	 long press
Switch to video / photo	 long press
Capture a photo	 short press
Main Menu	Button
Enter main menu	 long press
Navigation upwards/rightwards	 short press
Navigation downwards/leftwards	 short press
Confirm selection	 short press
Exit submenu without confirming selection	 long press
Exit menu (switch to viewing mode)	 long press

Quick Menu	Button
Enter quick menu	 short press
Switch between quick menu options	 short press
Increase value	 short press
Decrease value	 short press
Exit quick menu	 long press

Precautions


- Always use the APS 5 charger supplied with the device (or purchased separately) to charge APS 5 batteries. Using an unsuitable charger can cause irreparable damage to the battery and fire.
- Do not charge the battery immediately after exposure to a cold environment. Let the battery warm for at least 30 minutes before charging.
- Do not leave the battery unattended while charging.
- Do not use the charger if it has been modified or damaged.
- Do not leave the battery in a plugged-in charger after charging is complete.
- Do not expose the battery to high temperatures or open flames.
- Do not use the battery as a power source for devices that do not support APS 5 batteries.
- Do not disassemble or deform the battery or charger.
- Do not drop or strike the battery or charger.
- Protect the battery and charger from water and moisture.
- Keep the battery out of the reach of children.


Recommendations for Battery Use

- The batteries should be partially charged (50 to 80 %) for long-term storage.
- Charge at an ambient temperature of 0°C to +35°C (32°F to 95°F) or the lifespan of the battery will decrease significantly.
- Using the battery at sub 0°C (<32°F) ambient temperature decreases battery capacity. This is normal and not a defect.
- Using the battery at temperatures outside the range of -25°C to +40°C (-13°F to 104°F) may reduce battery life.
- The battery is short-circuit protected. Any situation that may cause short-circuiting should be avoided.

Battery Charging


The **Axion XQ** thermal imager comes with an APS 5 rechargeable Lithium-ion battery. APS 5 batteries support USB Power Delivery fast charging technology when using a standard charging set (charger, USB Type-C cable, power adapter). Before first use, make sure the battery is fully charged.

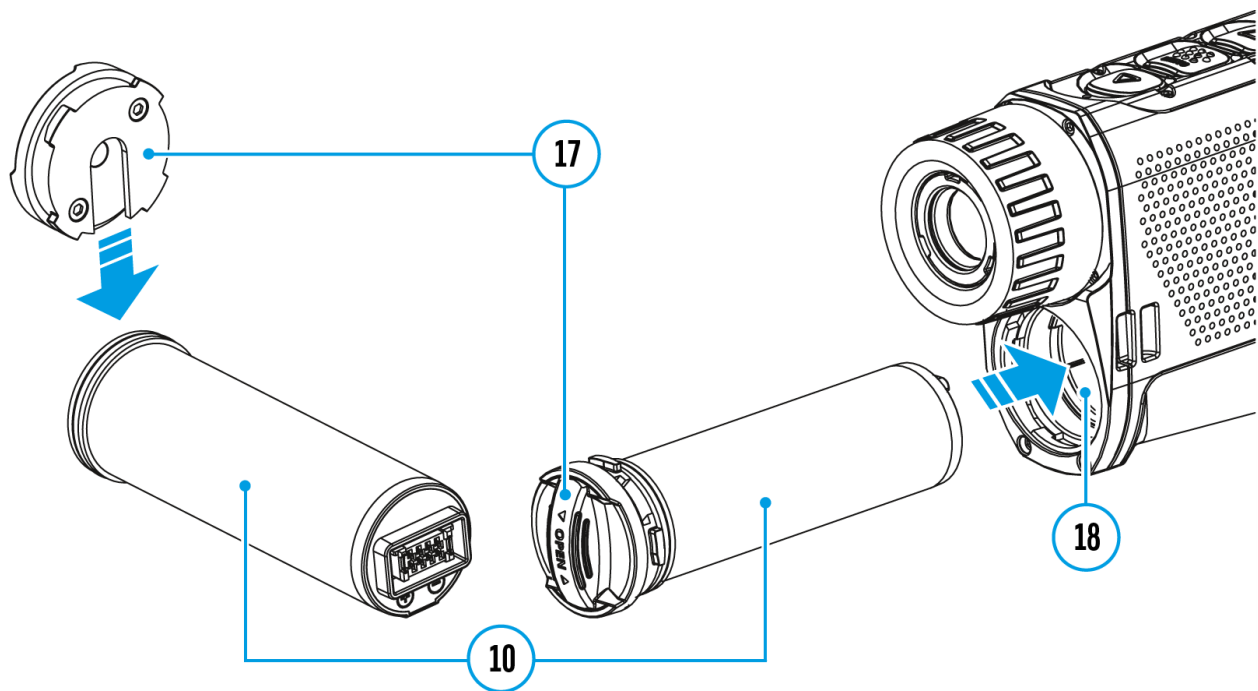

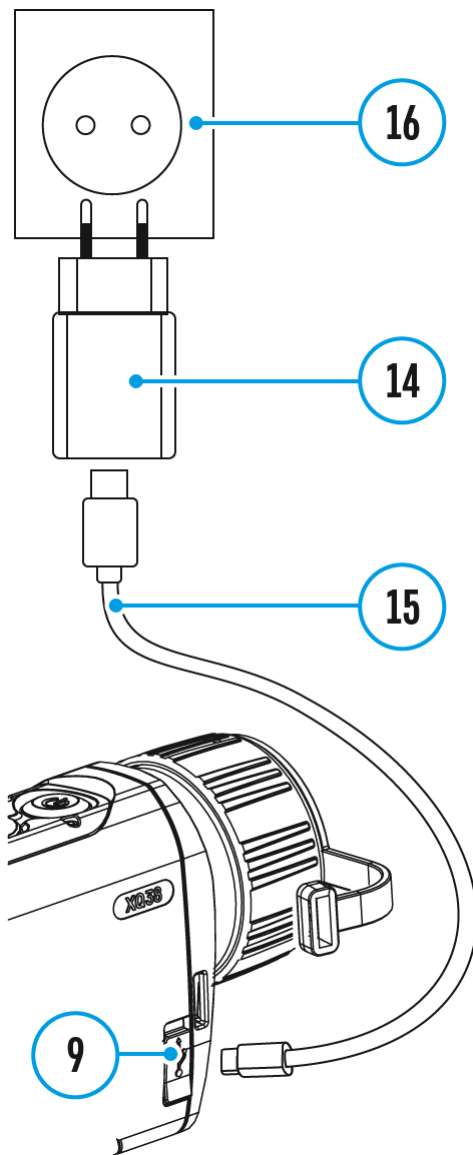

Option 1

1. **Install** the APS 5 battery **(10)** in the battery compartment **(18)** of the device.
2. Connect the USB cable **(15)** to the USB Type-C connector **(9)** of the device.
3. Connect the other end of the USB cable **(15)** to the Power Adapter **(14)**.
4. Plug the Power Adapter **(14)** into a 100-240 V socket **(16)**.

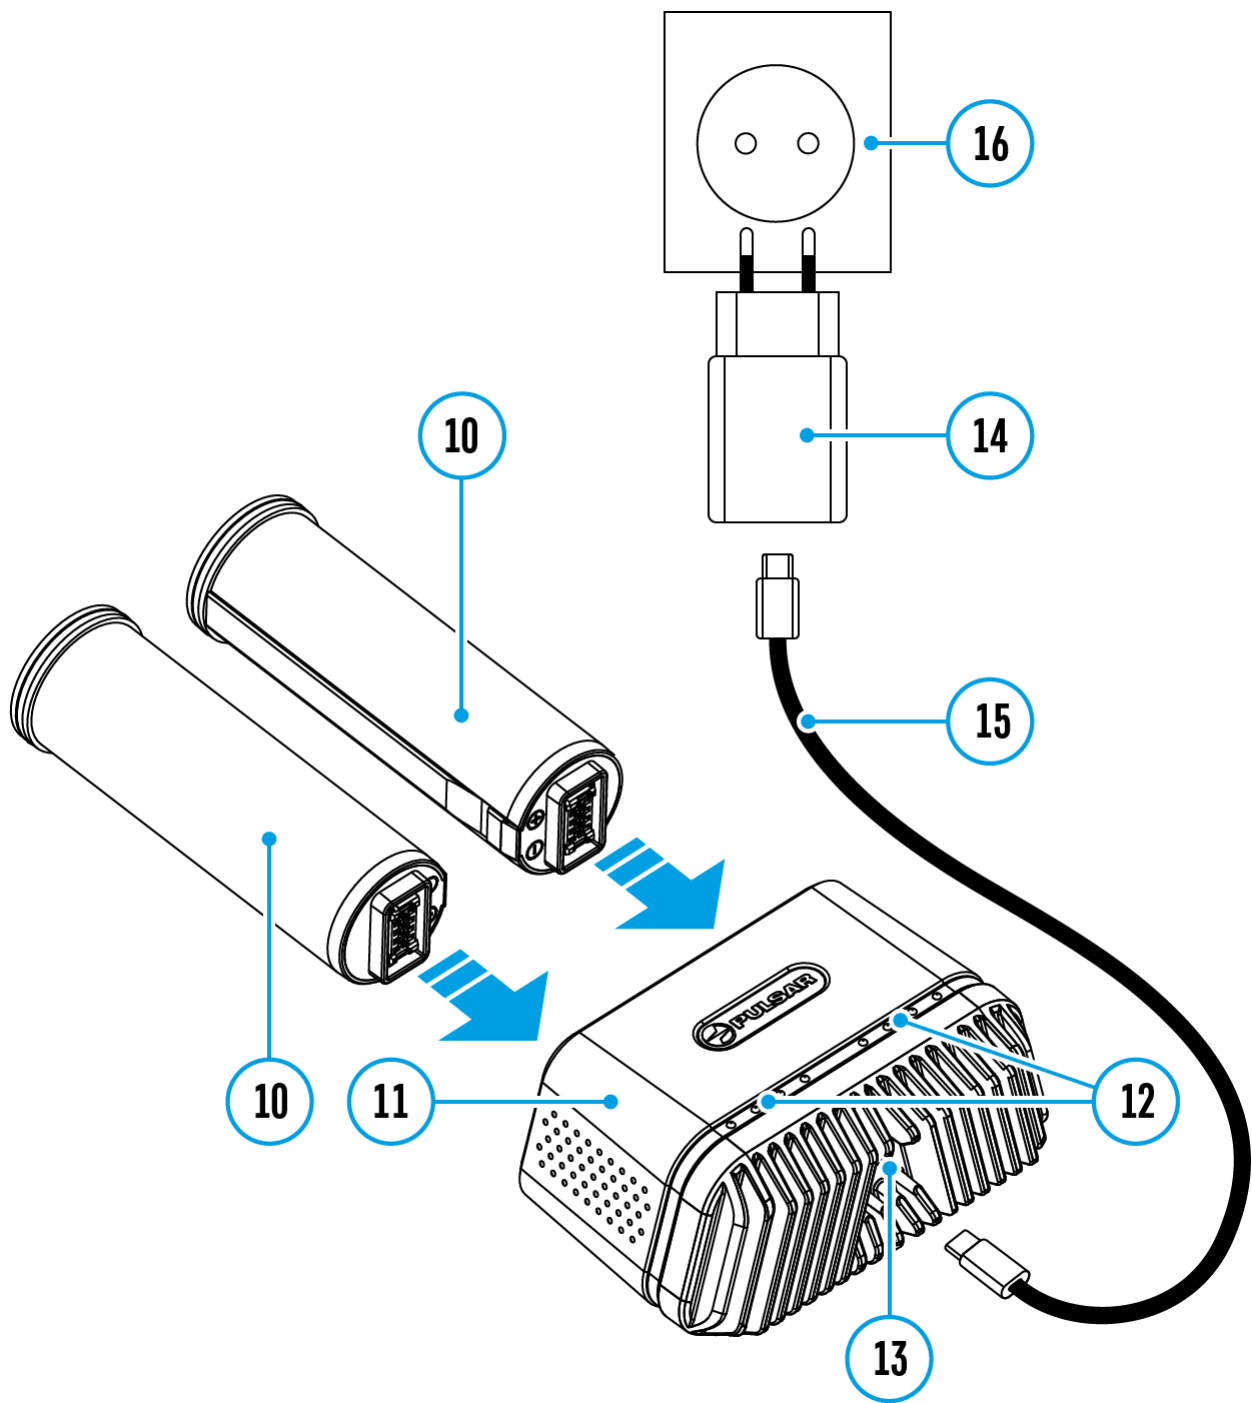

























Option 2

1. Insert the APS 5 battery **(10)** along the guide into the APS 5 charger **(11)** slot as far as it will go. The APS charger is supplied with your device and sold separately.
2. Connect the plug of the USB Type-C cable **(15)** to the USB Type-C connector of the Power Adapter**(14)**.
3. Plug the Power Adapter **(14)** into a 100-240 V socket **(16)**.
4. Connect the other end of the USB Type-C cable **(15)** to the USB Type-C connector **(13)**of the charger.

5. LED indicators **(12)** will display the battery charge level (see Table).

Note:Two batteries can be charged at the same time, a second slot is provided for it.

LED indication (12) in the battery charging mode	Battery Level
	Battery charge level is from 0% to 25%
 	Battery charge level is from 26% to 50%
  	Battery charge level is from 51% to 80%
   	Battery charge level is from 81% to 99%
   	Battery is fully charged. Charging will automatically stop. The battery can be disconnected from the charger.
	Defective battery. Do not use the battery!
LED indication (12) in the standby mode*	Battery Level
	Battery charge level is from 0% to 25%
	Battery charge level is from 26% to 50%
 	Battery charge level is from 51% to 80%
  	Battery charge level is from 81% to 99%


	Battery is fully charged. It can be disconnected from the charger.
	Defective battery. Do not use the battery!

* Standby mode is when the batteries are in the charger but the Power Adapter is not connected. In this mode, the indicators are only on for 10 seconds.

Attention! When using a Power Adapter that does not support USB Power Delivery fast charging technology, the flicker frequency of the LED indicators decreases by a factor of 3 and the charge time increases.

Attention! The charger heats up during fast charging. Excess heat is removed through the radiator and does not affect the device operation.

Battery Installation

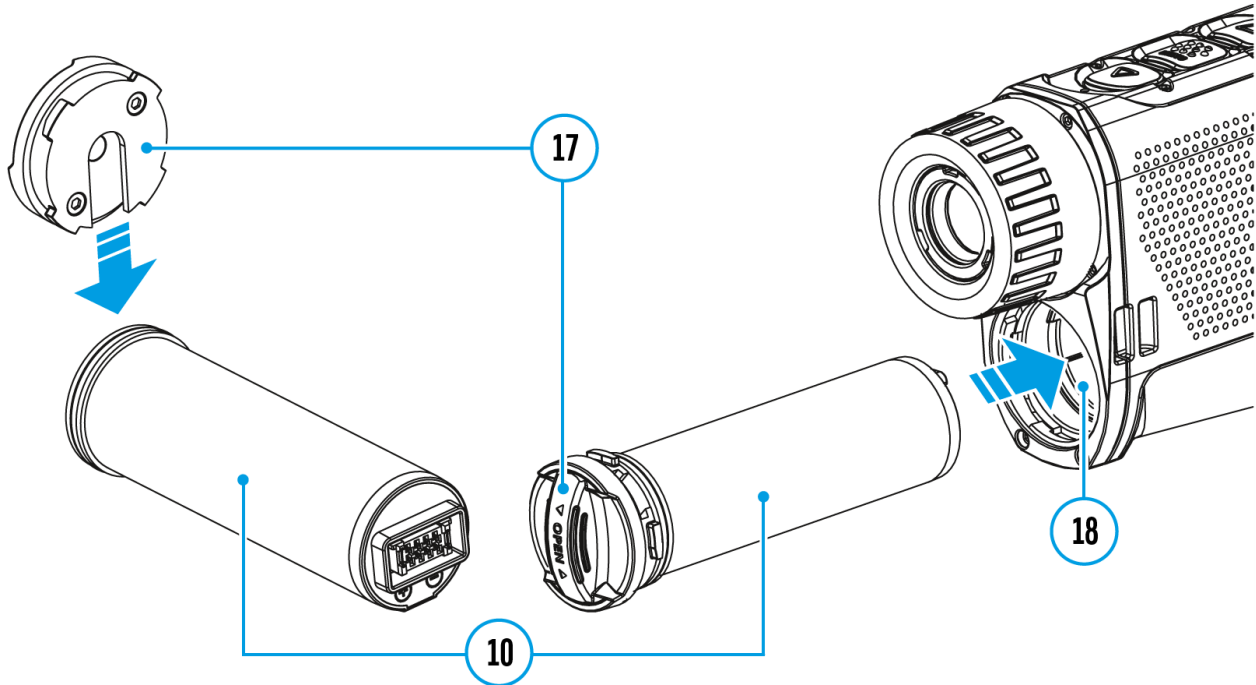


Attention! Before installing the battery, make sure that there is an undamaged rubber insulating ring on the battery. The ring is designed to protect your device from moisture getting inside. Damage to the device due to a missing ring is not covered by the warranty. To replace or purchase a ring, contact your **local distributor**.



1. Put the Lock-cover **(17)** on the rechargeable APS 5 battery **(10)**.
2. Insert the APS 5 battery **(10)** along the guide into the battery compartment **(18)**.
3. Lock the battery **(10)** by turning the Lock-cover **(17)** clockwise until it stops.
4. Turn the Lock-cover **(17)** counter-clockwise to remove the battery **(10)**.

External Power Supply

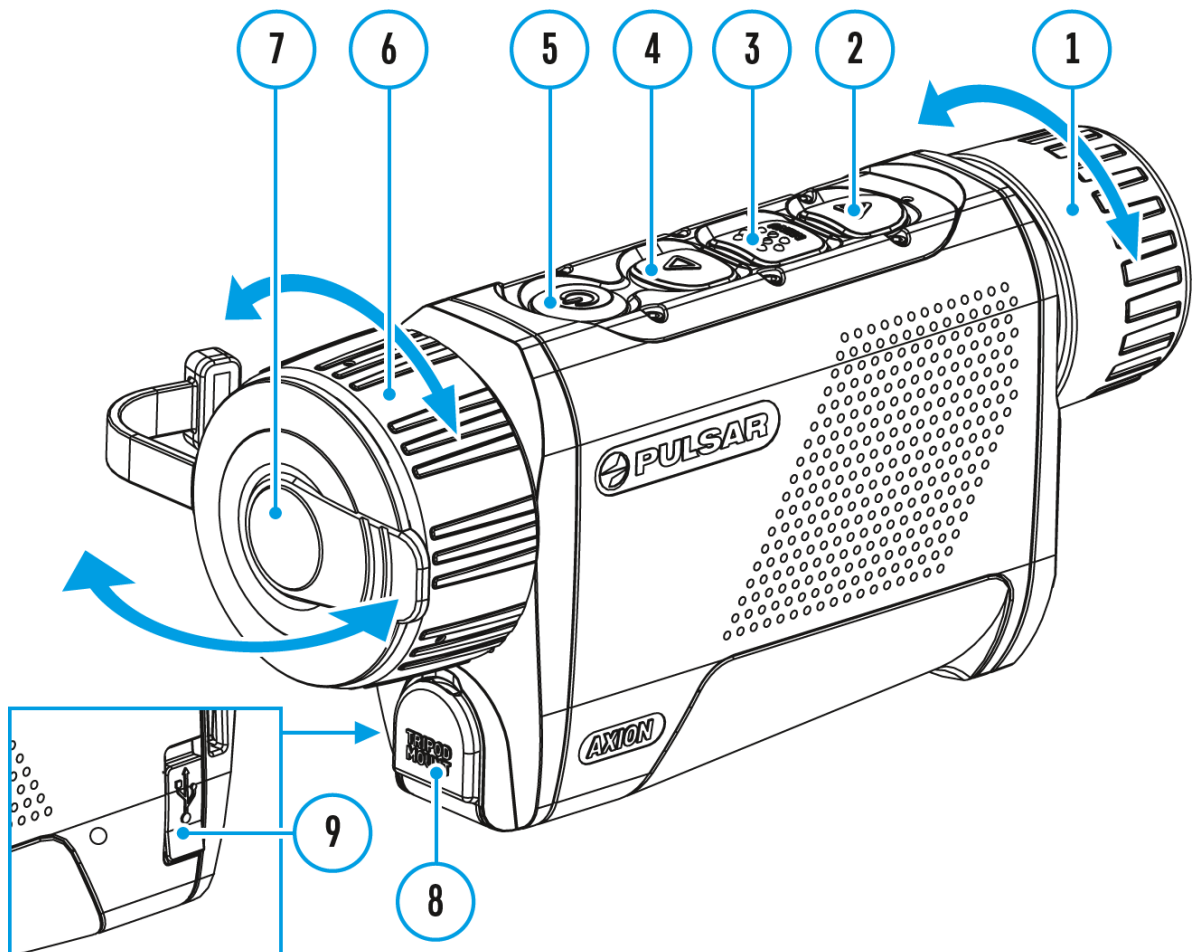Show device diagram



External power can be supplied from an external source, such as a Power Bank (5-15 V).


1. Connect the external power source to the USB Type-C connector **(9)** on the device.
2. The device will switch to draw power from the external source while the APS5 battery is gradually recharged.
3. A battery icon  will appear on the display showing the percentage-charged level.
4. An icon  will be displayed when the device is powered by an external power source and the APS5 battery is not connected.

5. The device automatically switches to the APS 5 battery when the external power supply is disconnected.

Attention! Charging APS 5 batteries from an external source at temperatures below 0°C (<32°F) can reduce battery life. When using external power, connect the power bank to the device only after it has been turned on and working (warming) for at least several minutes.

Powering on and Image Settings

Show device diagram

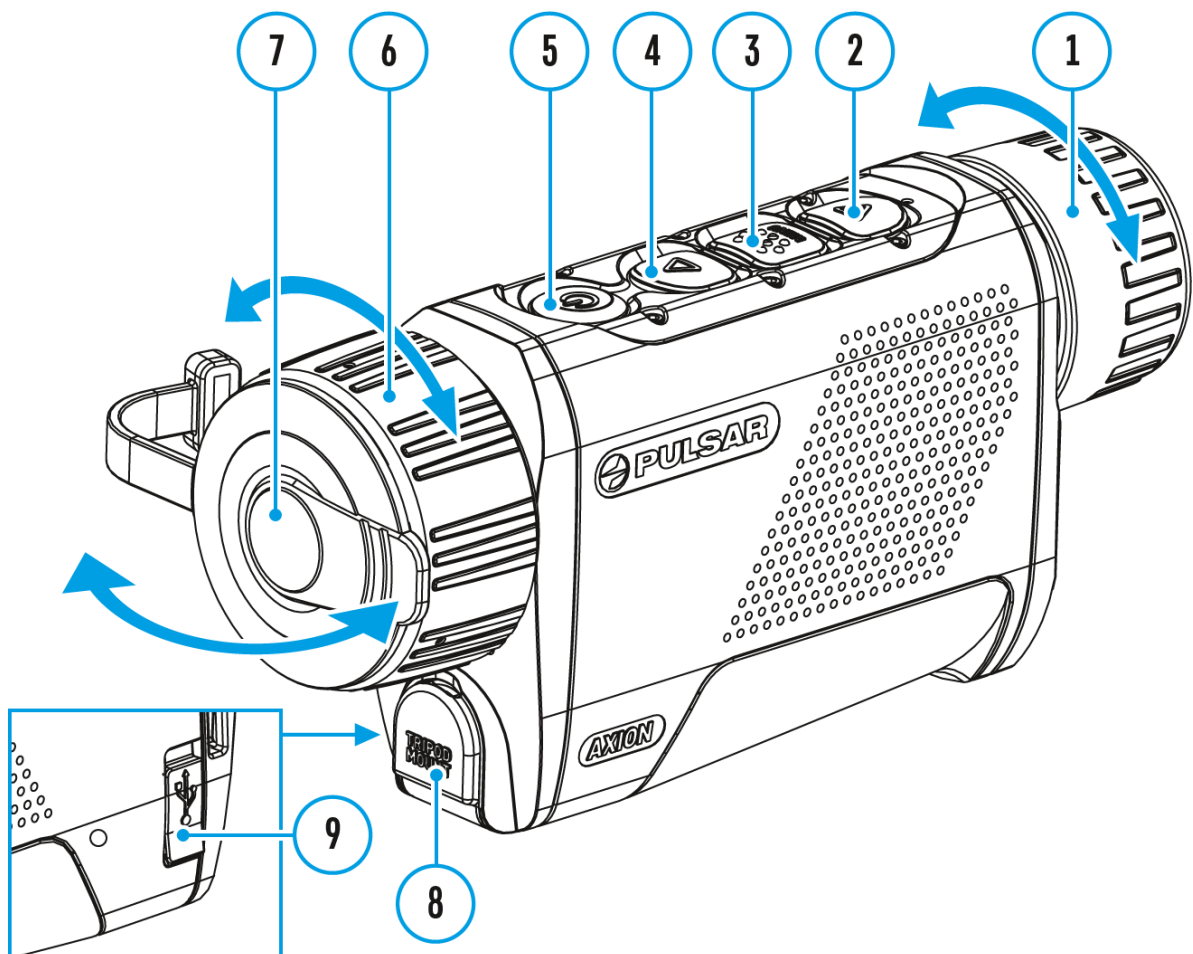

1. Open the lens cover (**7**). The lens cover can be secured to the strap using the built-in magnet.
2. Press the **ON/OFF (5)** button briefly to turn on the device.
3. Adjust the eyepiece focus ring (**1**) of the device until the symbols on the display are sharp.
4. Rotate the lens focus ring (**6**) to focus on the object being observed.
5. Enter the main menu with a long press of the **MENU (3)** button and select the desired calibration mode: Manual (**M**), Semi-Automatic (**SA**)


or Automatic (**A**).

6. Calibrate the image by briefly pressing the **ON/OFF (5)** button. If the **SA** or **A** calibration mode has been selected the microbolometer is closed with an internal shutter automatically. However, if the **M** calibration mode has been selected you must close the lens cover before calibrating manually.
7. Select the desired observation mode (**Forest, Identification, Rocks, User**) by briefly pressing the **UP (4)** button. User mode allows you to change and save user defined brightness and contrast settings in the quick menu.
8. Enter the main menu with a long press of the **MENU (3)** button and select the desired color mode (for more details see the [Color Modes](#) section).
9. Activate the quick menu by briefly pressing the **MENU (3)** button to adjust the brightness, contrast and smooth digital zoom (for more details see the [Quick Menu Functions](#) section).
10. After use, turn the device off by a long press of the **ON/OFF (5)**

Warning! Never point the lens at intensive energy sources such as laser radiation emitting devices or the sun. It can damage electronic components in the device. The warranty does not cover damage arising from failure to comply with operating instructions.

Microbolometer Calibration

Show device diagram

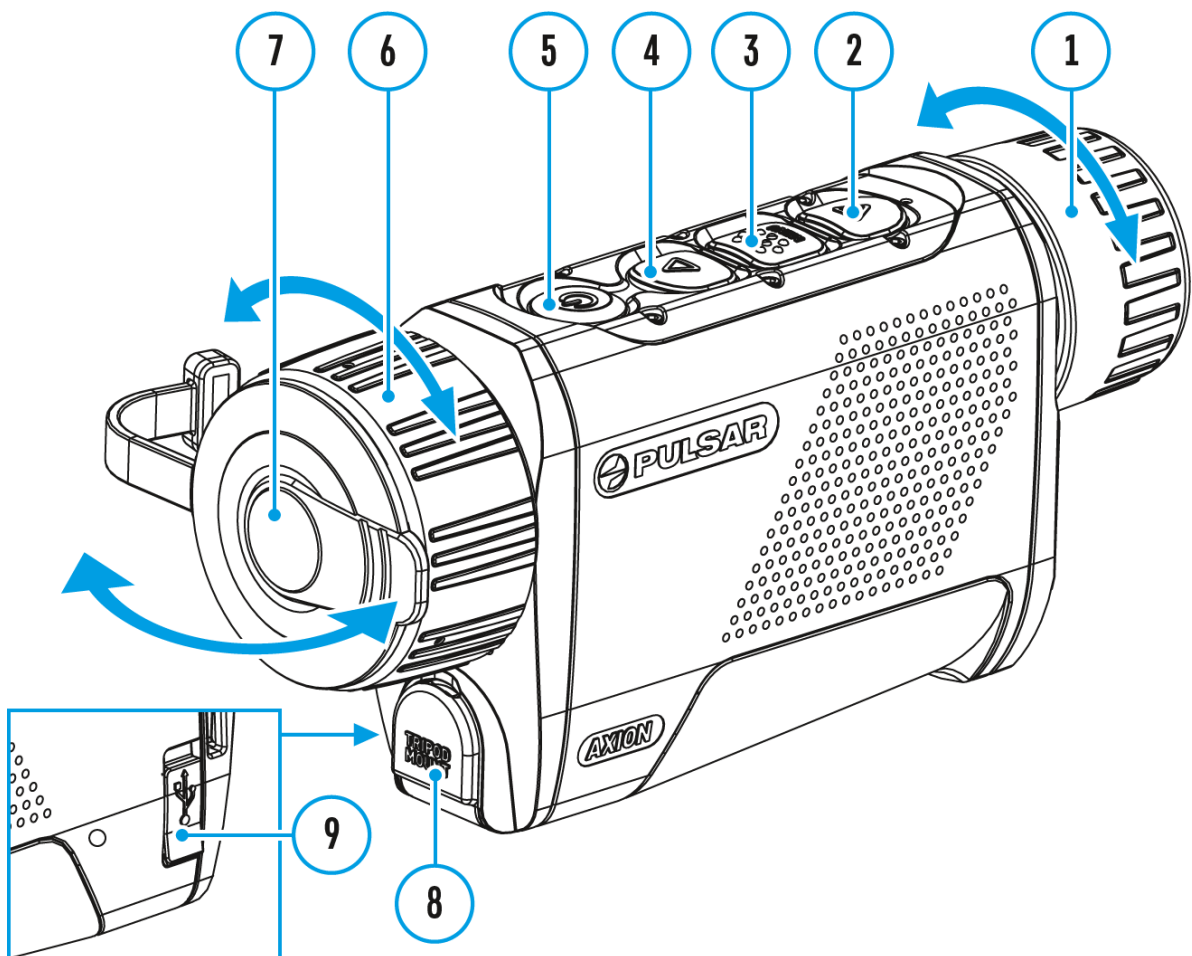

Calibration eliminates image flaws (such as vertical bars, phantom images, grainy field of view, etc.) by equalizing the microbolometer background temperature.

During calibration, the image on the display briefly freezes for up to 1 second.

There are three calibration modes: **Manual (M)**, **Semi-Automatic (SA)**

and **Automatic (A)**.

Select the required mode in the **Calibration Mode**  menu item.


M mode (Manual).

- Close the lens cover.
- Press the **ON/OFF (5)** button briefly.
- Open the lens cover after the calibration is completed.

SA mode (Semi-Automatic).


- Press the **ON/OFF (5)** button briefly to activate calibration.
- There is no need to close the lens cover because an internal shutter covers the microbolometer automatically.

A mode (Automatic).

- The device is calibrated autonomously according to firmware algorithms.
- There is no need to close the lens cover because an internal shutter covers the microbolometer automatically.
- In this mode, the user can still choose to calibrate the device using the **ON/OFF (5)** button if required (as in the **SA** mode).
- In Automatic calibration mode a countdown timer  00:03 will appear instead of the calibration mode icon 3 seconds before automatic calibration begins.

Discrete Digital Zoom

Show device diagram

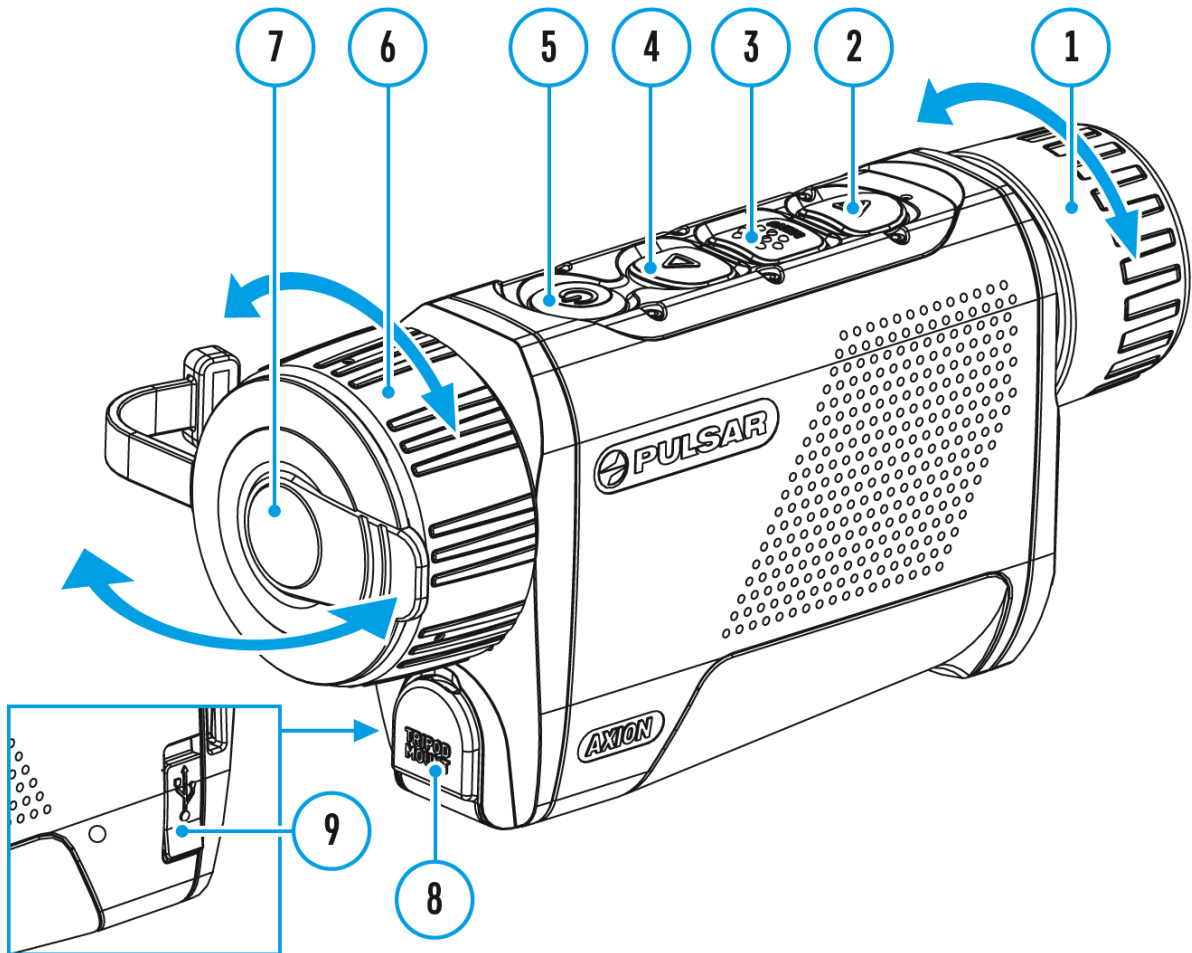


The device functionality allows you to quickly increase the base magnification by 2 or 4 times as well as return to the base magnification.

Press and hold the **UP (4)** button to change the digital zoom.

Status Bar



The status bar at the bottom of the display shows current operating statuses via icons, including:

- Color Mode (shown only when the Black Hot color mode is selected)
- Observation Mode
- Calibration Mode (in Automatic calibration mode a countdown timer  will appear instead of the calibration mode icon 3 seconds before automatic calibration begins).
- Magnification
- Microphone
- Wi-Fi Connection
- Time
- Power Indication:

- charge level if the device is powered by a battery



- charge level if the device is charging and powered by a battery



- no battery, the device is connected to an external power supply


Quick Menu Functions

Show device diagram




The basic settings (adjusting brightness and contrast, using the Smooth Digital Zoom and Stadiametric Rangefinder functions) can be changed using the quick access menu.


- Enter the menu by briefly pressing the **MENU (3)**.
- A short press of the **MENU (3)** button enables you to toggle between functions, as described below.

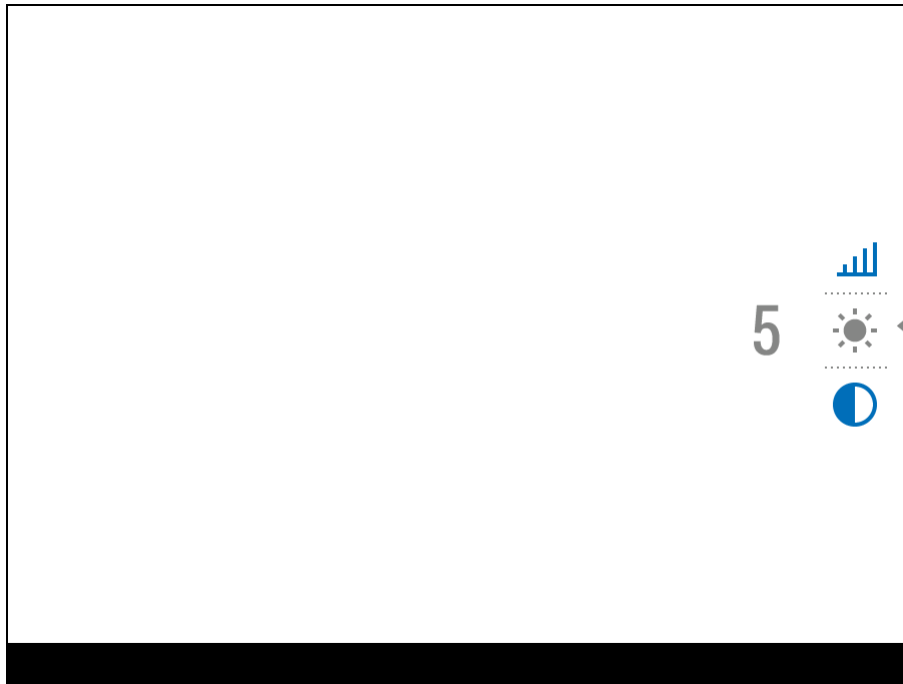


Brightness  – press the **UP (4) / DOWN (2)** buttons to change display brightness from 0 to 20.

Contrast  – press the **UP (4) / DOWN (2)** buttons to change image contrast from 0 to 20.

Base Mode  –allows you to select one of the three observation modes (Forest, Rocks, Identification) as the base for the User mode.


Smooth Digital Zoom  – press the **UP (4)/DOWN (2)** button to change the value of the digital zoom from 3.5 to 14. The digital zoom changes in 0.1 increments.

Stadiometric Rangefinder  - change the position of special marker lines to determine the distance to the object being observed by pressing the **UP (4) / DOWN (2)** buttons (for more details see the [Stadiametric Rangefinder](#) section).

- Press and hold the **MENU (3)** button to exit the menu or wait for 10 seconds to exit automatically.

Enter the Main Menu



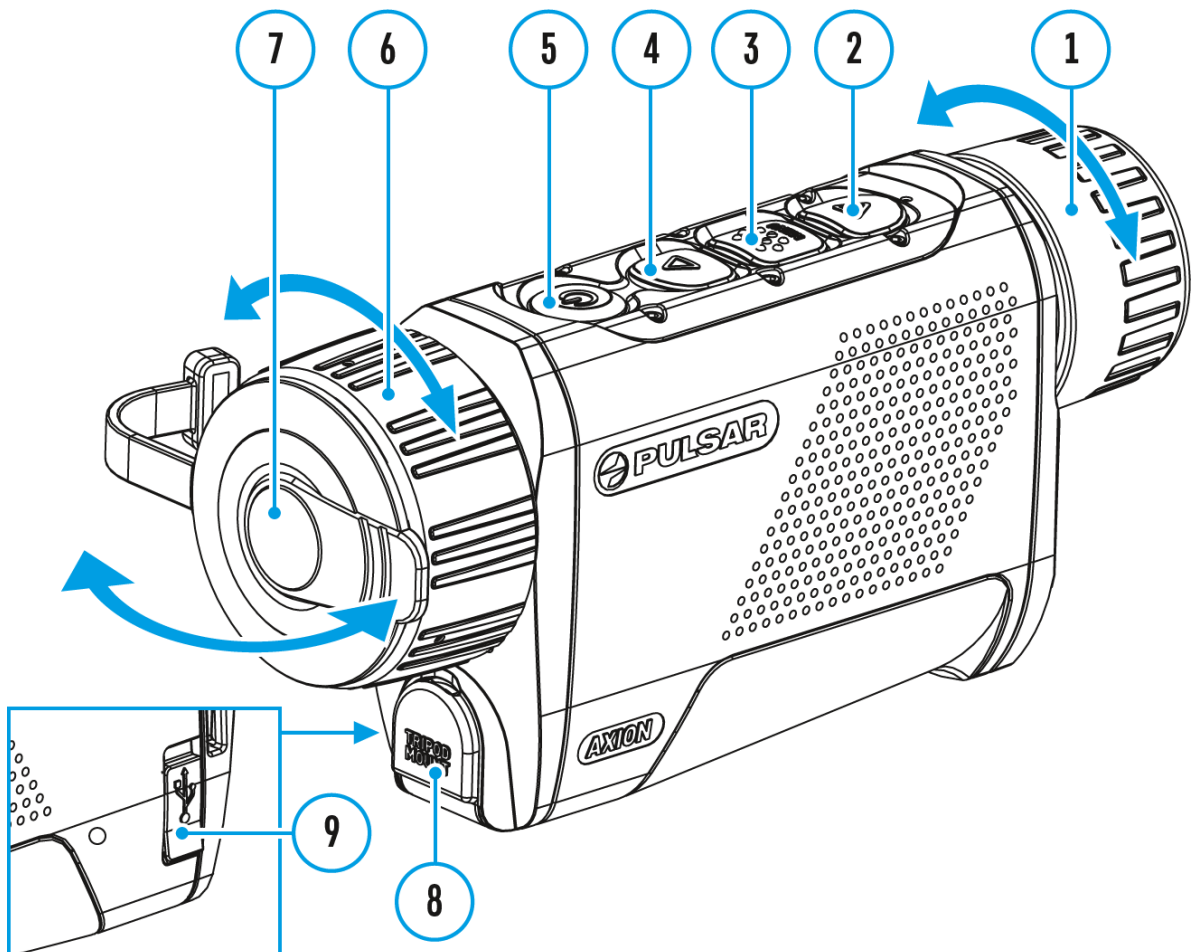





Show device diagram







1. Enter the main menu with a long press of the **MENU (3)** button.
2. Press the **UP (4) / DOWN (2)** buttons to move through the menu items.
3. Press the **MENU (3)** button briefly to select the menu item.
4. Press and hold the **MENU (3)** button to exit the menu or wait for 10 seconds to exit automatically.
5. Automatic exit takes place after 10 seconds of inactivity.

General View of Menu:

Tab 1


Menu	Mode
	
	<input checked="" type="checkbox"/> On
	White hot
	Automatic
	<input checked="" type="checkbox"/> On
	<input type="checkbox"/> Off <input type="checkbox"/>
	10

Tab 2

Menu	General Settings
	>
	<input checked="" type="checkbox"/> On
	>
	

Mode

Show device diagram

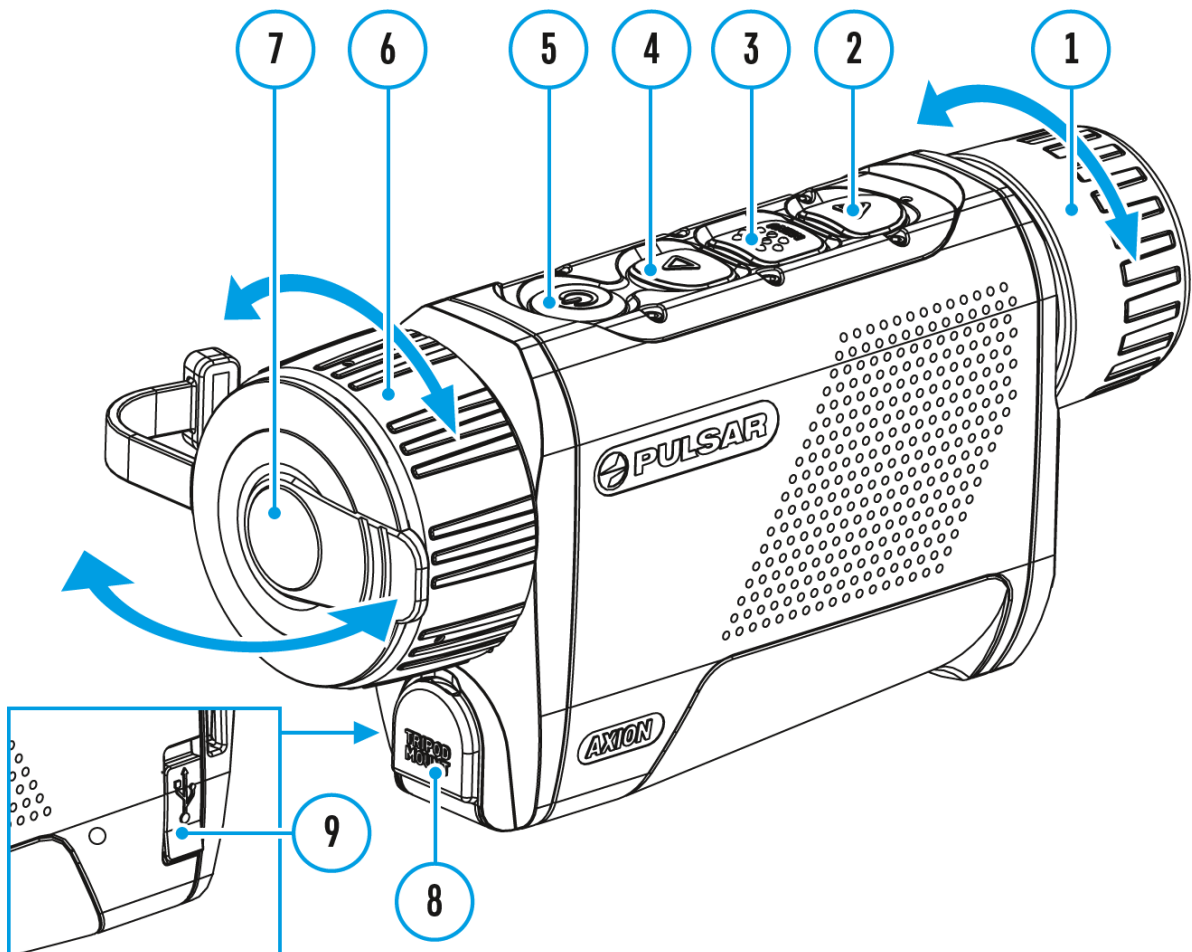


Observation mode selection

There are four observation modes: Forest (mode for low temperature contrast conditions), Rocks (mode for high temperature contrast conditions), Identification (high detail mode), and User (personalized brightness and contrast settings mode).

Option 1:

Press the **UP (4)** button briefly to switch the observation mode

Option 2:

1. Press and hold the **MENU (3)** button to enter the main menu.
2. Use the **UP (4)** / **DOWN (2)** buttons to select the **Mode**  icon.
3. Press the **MENU (3)** button briefly to enter the Mode submenu.
4. Use the **UP (4)** / **DOWN (2)** buttons to select one of the modes described below.
5. Press the **MENU (3)** button briefly to confirm the selection.



ForestMode.The most suitable mode when searching and observing in the field against a background of foliage, shrubs and grass. This mode provides a high level of information on both the observed object and landscape details.



RocksMode.The most suitable mode for observing objects after a sunny day or in urban environments.



IdentificationMode.The most suitable mode for observation in adverse weather conditions (fog, mist, rain, snow). It allows the characteristic features of objects to be more clearly recognized. The increased detail may result in a small graininess of the image.




User Mode.It allows you to configure and save custom brightness and contrast settings, as well as one of the three other modes (Forest, Rocks, Identification) as the base.


<http://www.youtube.com/embed/Mnt5c8ZP1PA>

Image Detail Boost


<https://www.youtube.com/embed/GNezJKveMRc>

Show device diagram

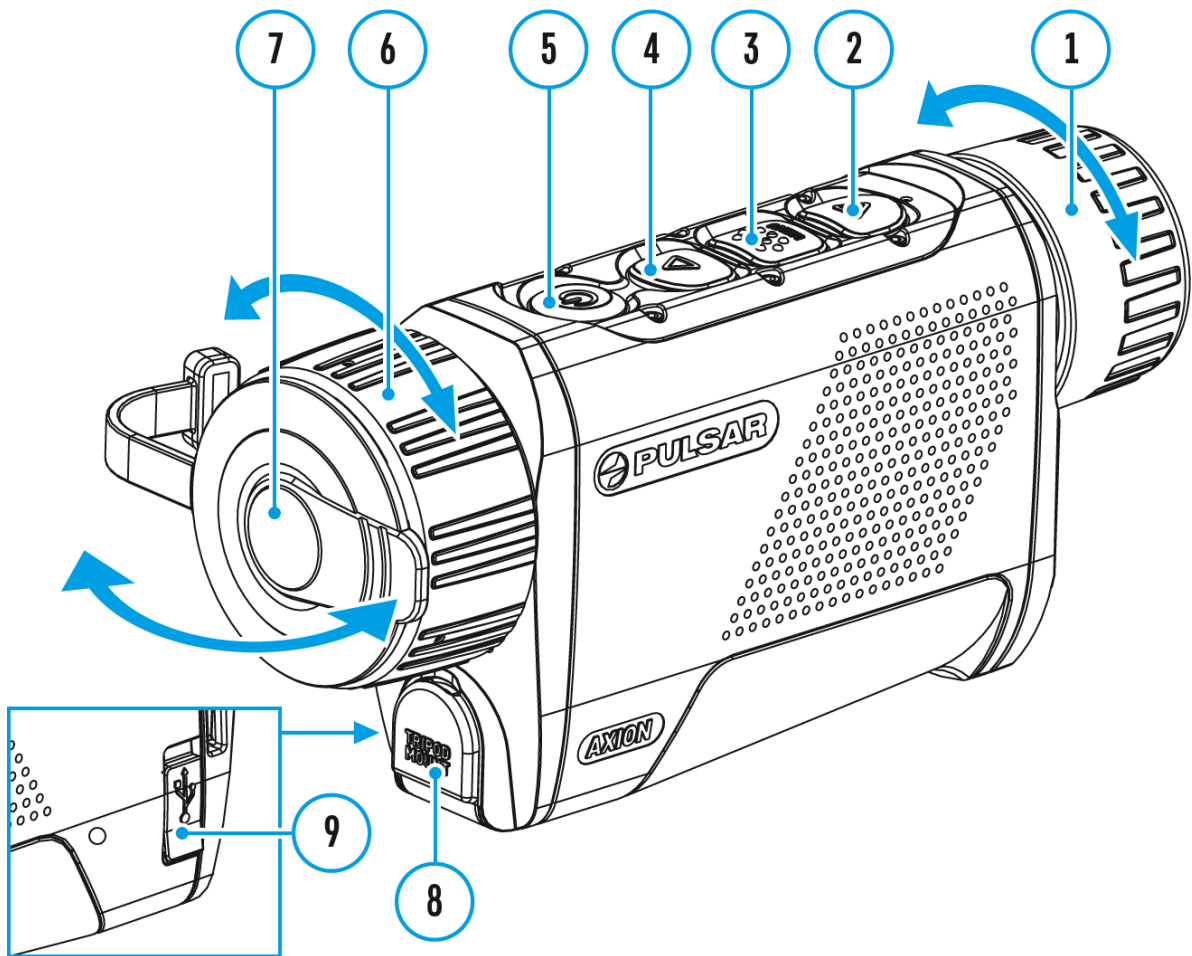

The **Image Detail Boost**  function increases the contour sharpness of heated objects to improve the image detail. The results of the function depend on the selected mode and the observation conditions: the higher the object contrast the more noticeable the effect. This option is enabled by default but can be disabled in the main menu.

Enable / disable Image Detail Boost:

1. Press and hold the **MENU (3)** button to enter the main menu.
2. Use the **UP (4)** / **DOWN (2)** buttons to select **Image Detail Boost** 

icon.

3. Press the **MENU (3)** button briefly to turn the function on / off.

Color Modes


Show device diagram





Color palette selection

White Hot is the default display mode. To select an alternative palette, do the following:


1. Press and hold the **MENU (3)** button to enter the main menu.
2. Use the **UP (4)** / **DOWN (2)** buttons to select **Color Modes**  icon.
3. Press the **MENU (3)** button briefly to enter the submenu.
4. Use the **UP (4)** / **DOWN (2)** buttons to select the desired palette.
5. Press the **MENU (3)** button briefly to confirm the selection.

- **Black Hot**- a black and white palette where white corresponds to cold temperatures and black to hot temperatures

- **Red Hot**
- **Red Monochrome**
- **Rainbow**
- **Ultramarine**
- **Violet**
- **Sepia**


Calibration Mode

Show device diagram

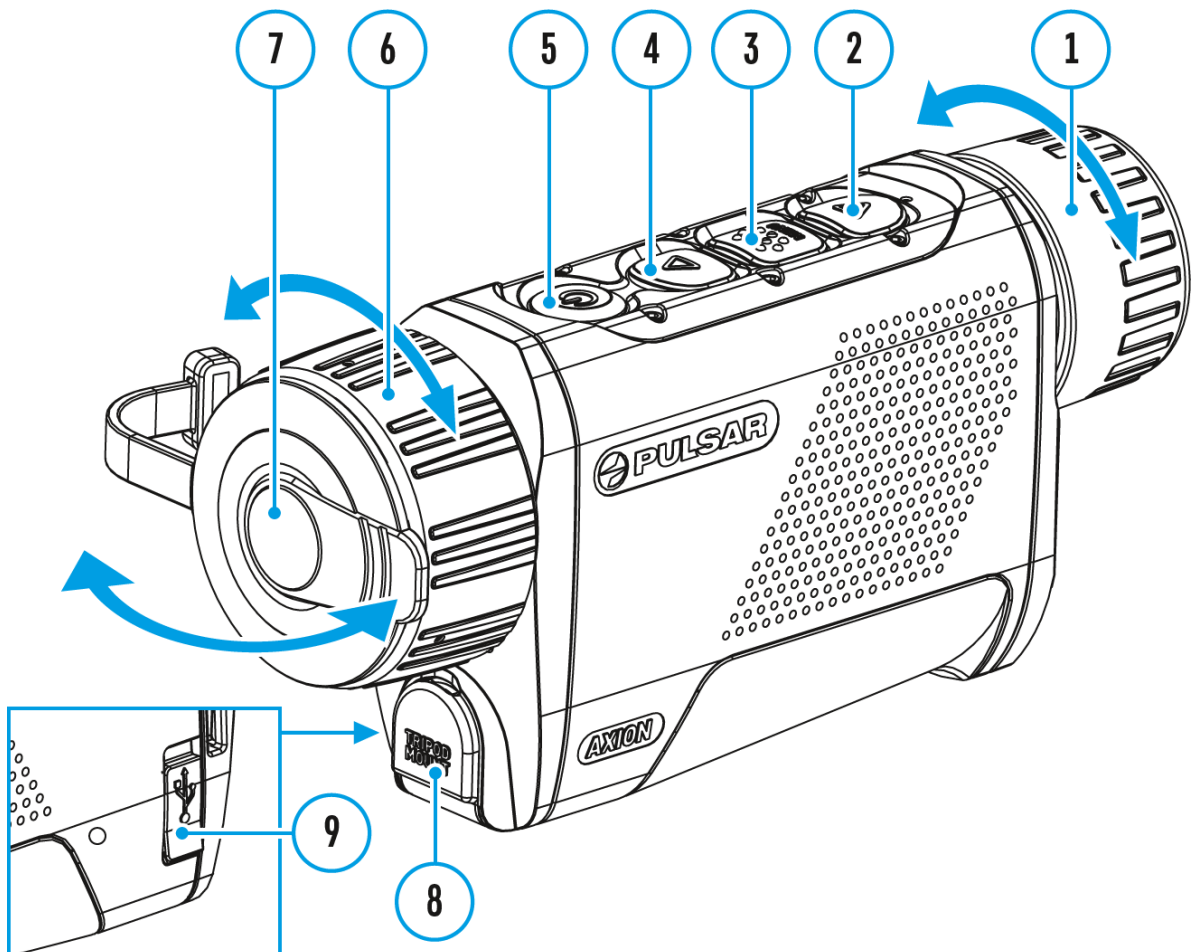

Calibration mode selection

There are three calibration modes: **Manual**, **Semi-Automatic** and **Automatic**.

1. Press and hold the **MENU (3)** button to enter the main menu.
2. Use the **UP (4)** / **DOWN (2)** buttons to select the **Calibration Mode**  icon.
3. Press the **MENU (3)** button briefly to enter the submenu.
4. Use the **UP (4)** / **DOWN (2)** buttons to select one of the calibration modes described below.

5. Press the **MENU (3)** button briefly to confirm the selection.


Automatic (A). In this mode the firmware determines the need for calibration. The calibration process starts automatically.

Semi-Automatic (SA). The user determines the need for calibration based on the image quality and can action at a convenient time depending on the object being observed.

Manual (M). In the Manual (silent) calibration mode the user determines the need for calibration (as in **SA** mode) but the lens cover must be closed during calibration.


Microphone

Show device diagram

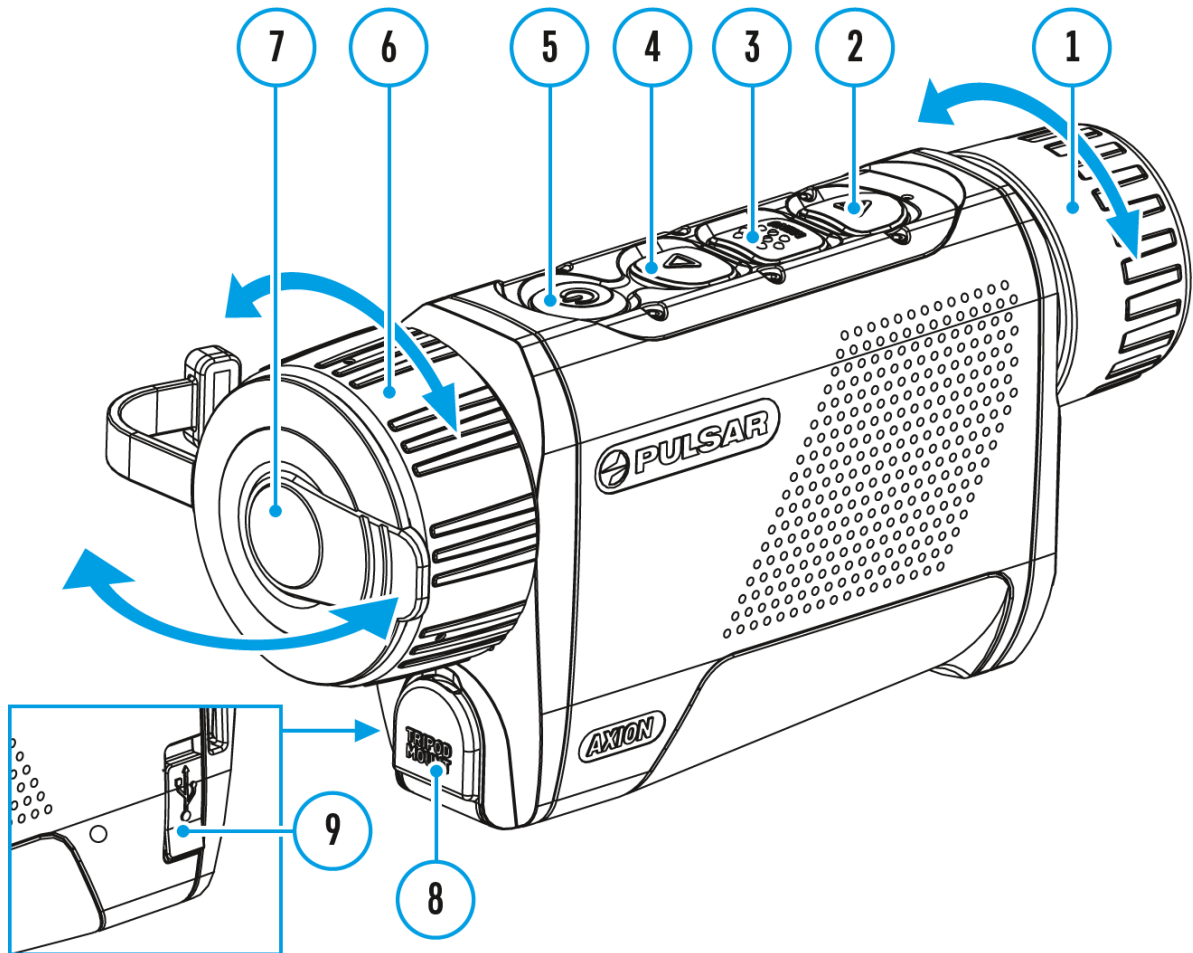

Turning microphone on / off


This item allows you to enable (or disable) the microphone for recording sound during video recording.

1. Press and hold the **MENU (3)** button to enter the main menu.
2. Use the **UP (4) / DOWN (2)** buttons to select **Microphone**  icon.
3. Press the **MENU (3)** button briefly to turn on / off.


The microphone is off by default.

PiP Mode

Show device diagram

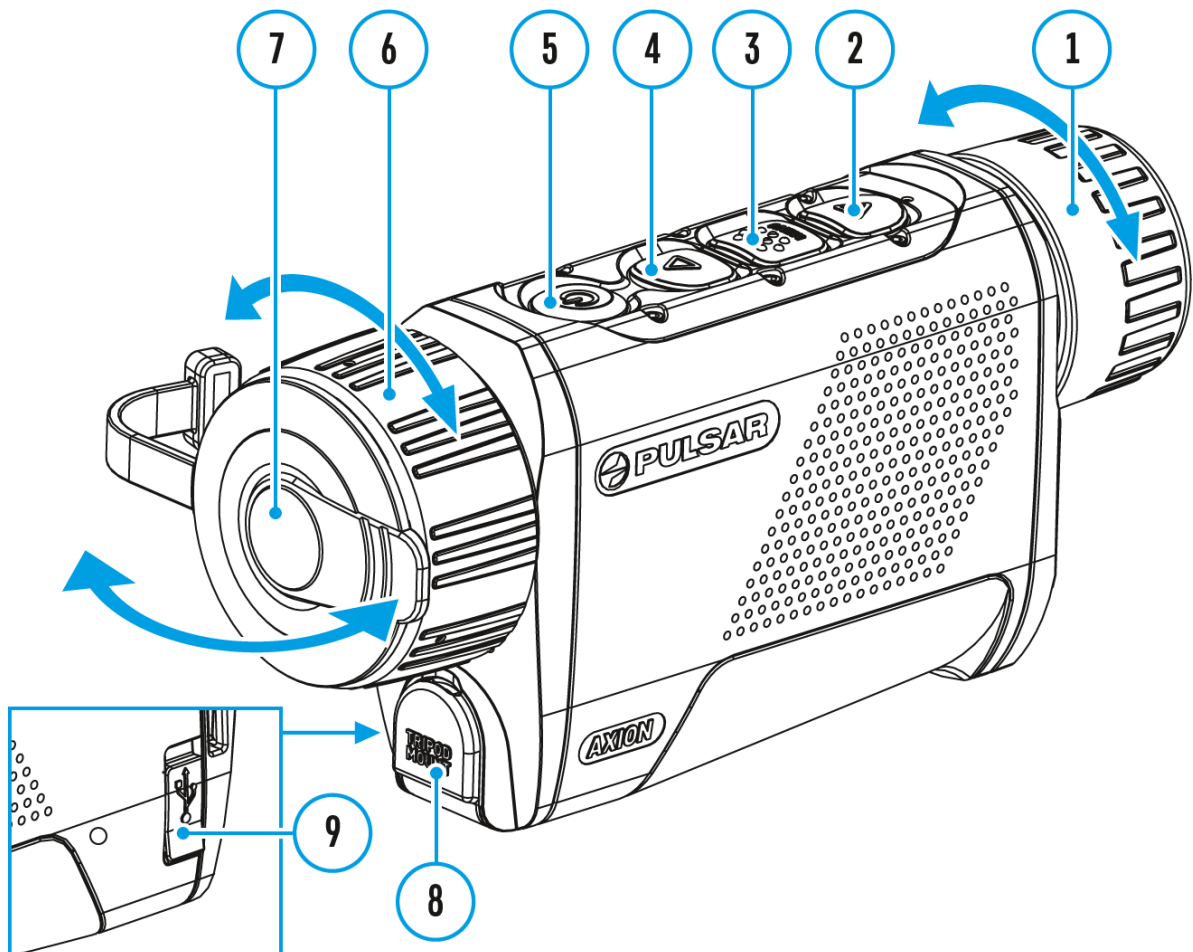

Picture in Picture mode


1. Press and hold the **MENU (3)** button to enter the main menu.
2. Use the **UP (4)** / **DOWN (2)** buttons to select the **PiP Mode**  icon.
3. Press the **MENU (3)** button briefly to turn on / off.

Icon Brightness

Show device diagram




Adjust brightness level of the icons and screensavers (Pulsar, Display off) on the display.


1. Press and hold the **MENU (3)** button to enter the main menu.
2. Use the **UP (4) / DOWN (2)** buttons to select the **Icon Brightness**  icon.
3. Press the **MENU (3)** button briefly to enter the submenu.
4. Use the **UP (4) / DOWN (2)** buttons to select the desired brightness level from 0 to 10.
5. Press the **MENU (3)** button briefly to confirm the selection.

General Settings

Show device diagram

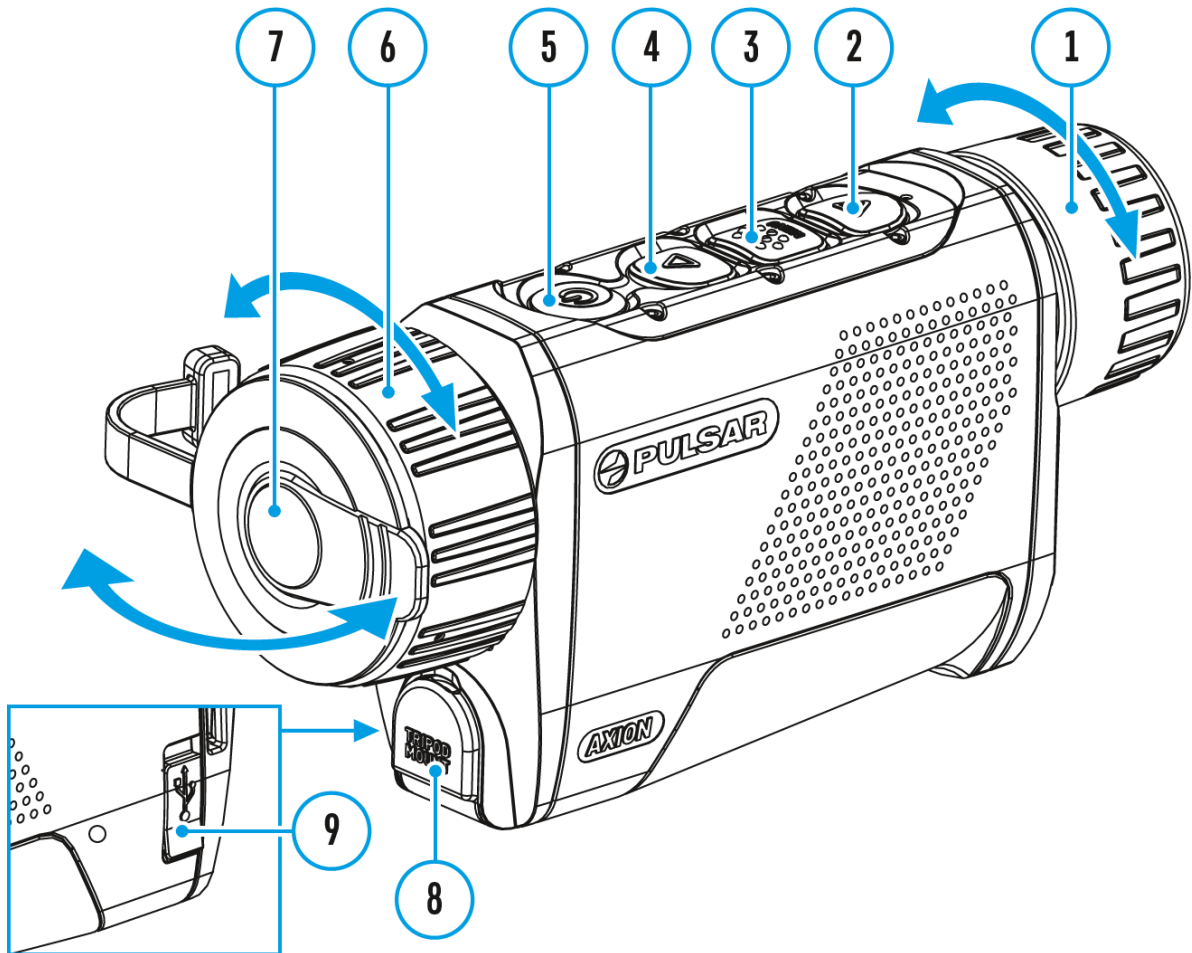


This menu section allows you to change the interface language, set the date, time, units of measure, return the device to factory default settings and perform memory card formatting.

1. Press and hold the **MENU (3)** button to enter the main menu.
2. Use the **UP (4)** / **DOWN (2)** buttons to select the **General Settings**  icon.
3. Press the **MENU (3)** button briefly to enter the submenu.
4. Choose the required menu item with **UP (4)** / **DOWN (2)** buttons.


Language

Language selection

1. Press the **MENU (3)** button briefly to enter the **Language**  menu item.
2. Use the **UP (4) / DOWN (2)** buttons to select one of the available interface languages: English, German, Spanish, French, Russian, Italian, Portuguese, Dutch, Danish, Norwegian, Swedish, Polish, Czech, Hungarian.
3. Press the **MENU (3)** button briefly to confirm the selection.
4. Press and hold the **MENU (3)** button to save your selection and exit from the submenu.


Date

Date setting

1. Press the **MENU (3)** button briefly to enter the **Date**  menu item. The date is displayed in dd/mm/yyyy format.
2. Use the **UP (4) / DOWN (2)** buttons to select the desired year, month, and date. Press the **MENU (3)** button briefly to toggle between digits.
3. Press and hold the **MENU (3)** button to save the date and exit the submenu.

Time


Time setting

1. Press the **MENU (3)** button briefly to enter the **Time**  menu item.
2. Select the time format (24-hour clock or AM / PM) by pressing the **UP (4) / DOWN (2)**.
3. Press the **MENU (3)** button to select the hours.
4. Press the **UP (4) / DOWN (2)** buttons to select the hour value.
5. Press the **MENU (3)** button to select the minutes.
6. Press the **UP (4) / DOWN (2)** buttons to select the minute value.
7. Press and hold the **MENU (3)** button to save the time and exit the

submenu.

Units of Measure

Rangefinder units of measure

1. Press the **MENU (3)** button briefly to enter the **Units of Measure**  menu item.
2. Press the **UP (4) / DOWN (2)** buttons to select either Meters or Yards as the unit of measure.
3. Press the **MENU (3)** button briefly to confirm your selection.
4. Exit from the submenu will happen automatically.

Default Settings

Factory reset

1. Press the **MENU (3)** button briefly to enter the **Default Settings** menu item.
 2. Use the **UP (4) / DOWN (2)** buttons to select **Yes** to restore default settings or **No** to cancel.
 3. Confirm your selection with a short press of the **MENU (3)**
- If **Yes** is selected, display will show "**Do you want to restore default settings?**" and **Yes** and **No** options. Select **Yes** to restore the default settings.
 - Selecting the **No** option will cancel the reset and exit the submenu.

The following settings will be returned to their defaults before being changed by the user:


- **Video Recorder Mode** – Video
- **Observation Mode** – Forest
- **Calibration Mode** – Automatic
- **Language** – English
- **Microphone** – off
- **Wi-Fi** – Off (default password)
- **Magnification** – Standard (without digital zoom)
- **PiP** – Off

- **Color Mode** – White Hot
- **Units of Measure** – Meters

Attention! When restoring the factory defaults the date, time and user pixel map are saved.


Format

This function enables you to format the Flash memory card. All files will be deleted.


1. Press the **MENU (3)** button briefly to enter the **Format** .
 2. Use the **UP (4)** / **DOWN (2)** buttons to select **Yes** to format the memory card or **No** to return to the submenu.
 3. Press the **MENU (3)** button briefly to confirm your selection.
- If **Yes** is selected, the message "**Do you want to format the memory card?**" appears on the display as well as **Yes** and **No**. Select **Yes** to format the memory card.
 - Selecting the **No** option will cancel the formatting and exit the submenu.

Wi-Fi Activation

Show device diagram

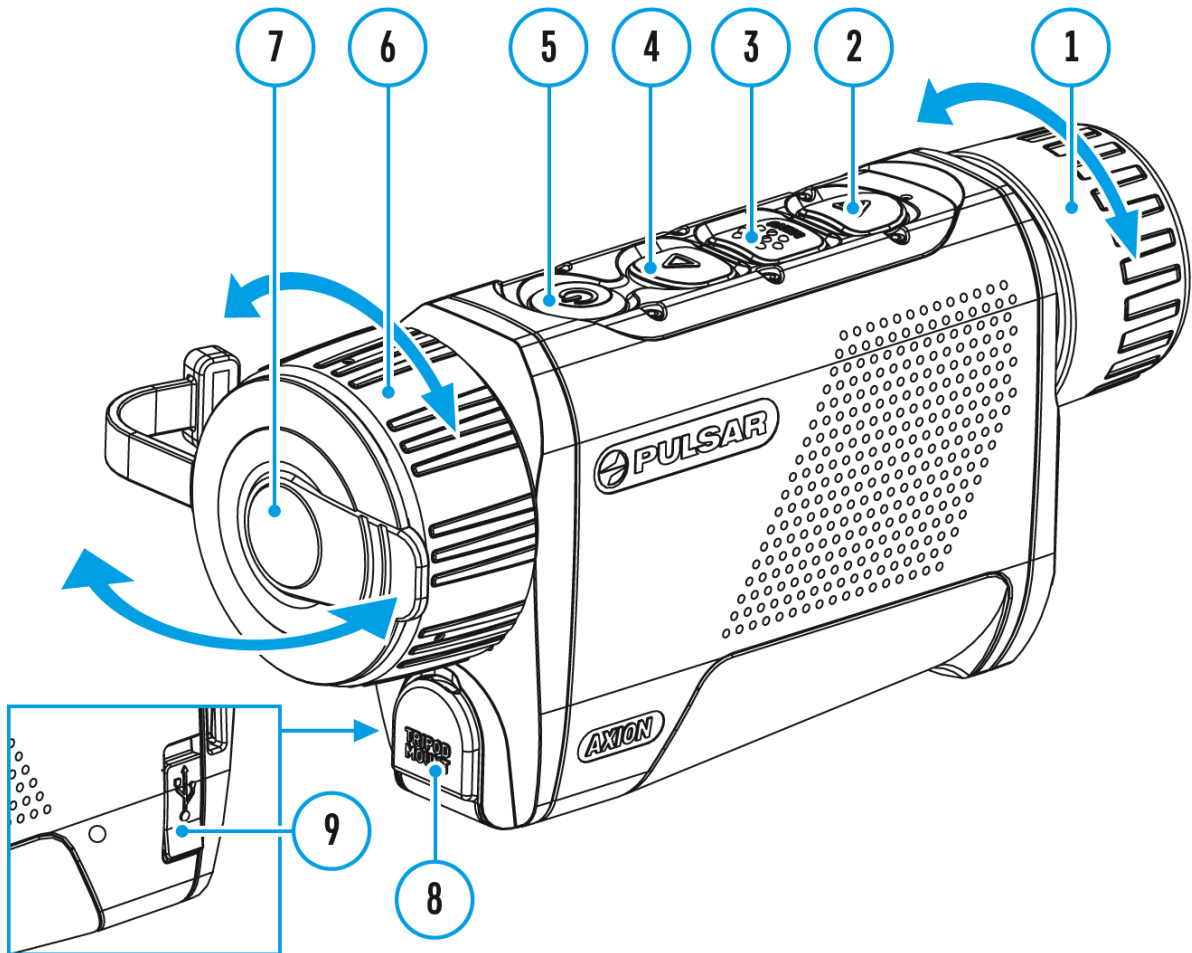


Turning Wi-Fi on/off


1. Press and hold the **MENU (3)** button to enter the main menu.
2. Use the **UP (4)** / **DOWN (2)** buttons to select the **Wi-Fi Activation**  icon.
3. Press the **MENU (3)** button briefly to turn **Wi-Fi** on / off.

Wi-Fi Settings

Show device diagram

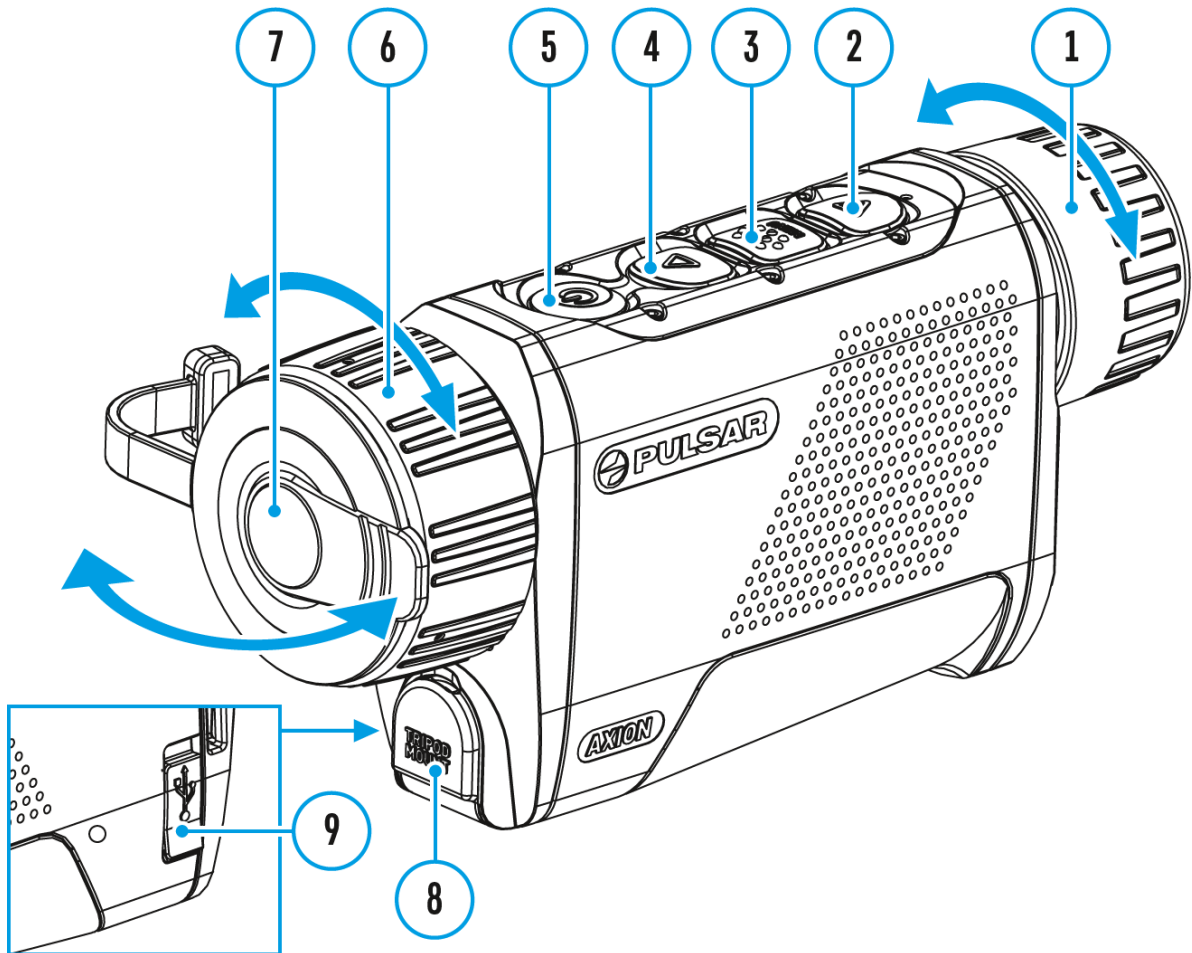


This item enables you to set up your device for operation in a Wi-Fi network.

1. Press and hold the **MENU (3)** button to enter the main menu.
2. Use the **UP (4) / DOWN (2)** buttons to select the **Wi-Fi Settings**  icon.
3. Press the **MENU (3)** button briefly to enter the submenu.

Password Setup

This function enables you to set a password to access the scope from an


external device. The password is used to connect an external device (i.e. smartphone) to your thermal imager.

1. Press the **MENU (3)** button briefly to enter the **Password Setup**  submenu.
2. The default password (**12345678**) will appear on the screen.
3. Use the **UP (4)** / **DOWN (2)** buttons to set the desired password using the **UP (4)** button to increase and the **DOWN (2)** button to decrease the values.
4. Press the **MENU (3)** button to toggle between the digits.
5. Press and hold the **MENU (3)** button to save your password and exit the submenu.

Access Level Setup


This option allows you to configure the appropriate access level to your device made available to the Stream Vision application.

- **Owner level.** A Stream Vision user has full access to all device functions.
- **Guest level.** A Stream Vision user only has access to the real time video stream from the device.

1. Press briefly the **MENU(3)** button to enter the **Access Level Setup**  submenu.
2. Select the access level with the **UP (4)** / **DOWN (2)** buttons.
3. Press and hold the **MENU(3)** to confirm your selection and exit from the submenu.

Device Information


Show device diagram

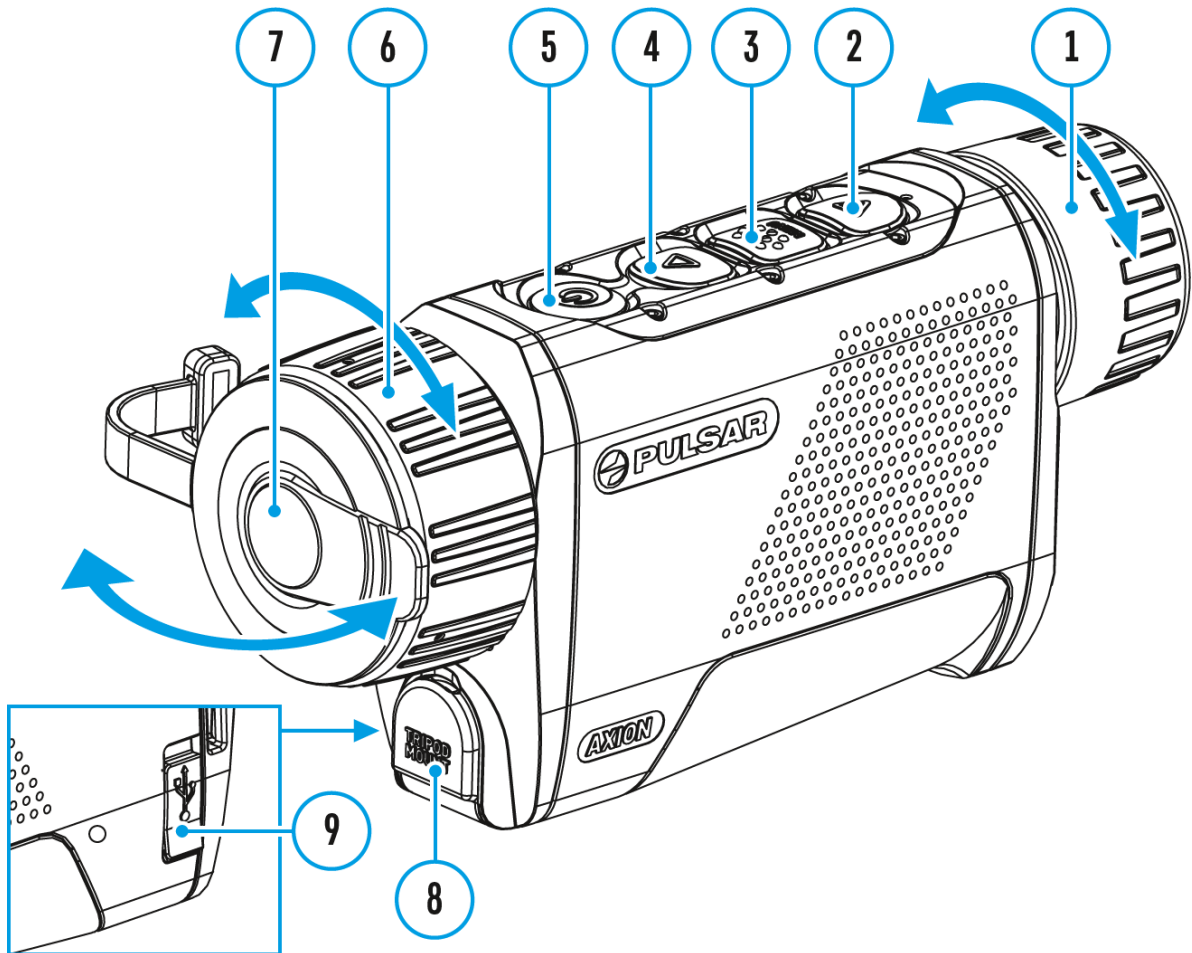

This menu item allows the user to view the following information about the device:


- SKU Number
- Firmware Version
- Device Name
- Hardware Version
- Device Serial Number
- Service Information

To display information, do the following:

1. Press and hold the **MENU (3)** button to enter the main menu.
2. Use the **UP (4)** / **DOWN (2)** buttons to select the **Device Information**  icon.
3. Press the **MENU (3)** button briefly to view / exit the information.

Video Recording and Photography

Show device diagram

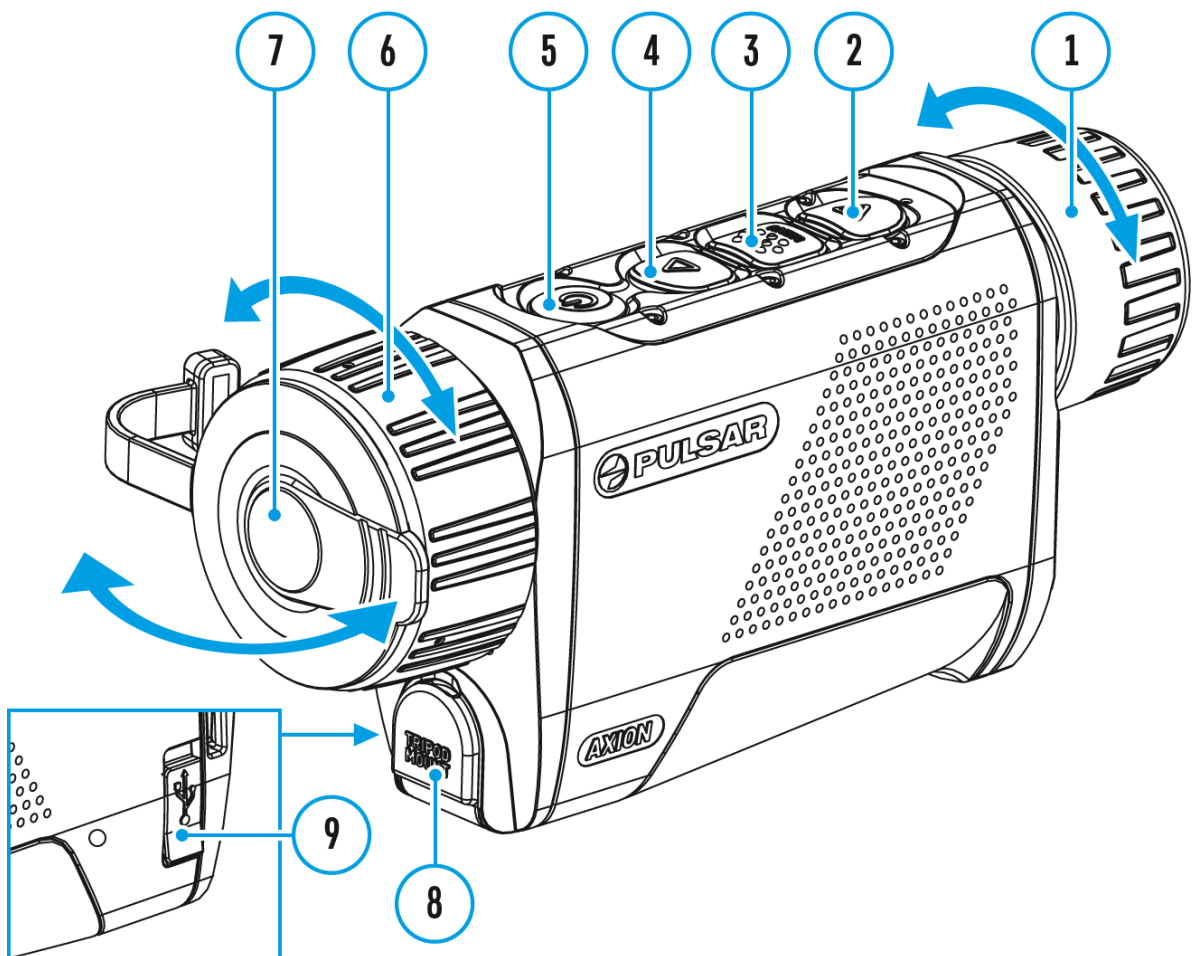

Axion XQ thermal imagers feature video recording and photography of the image being observed to the internal memory card.

Before using this feature please set the **date** and **time** (see [General Settings](#) section).

The built-in recorder operates in two modes - **Video** and **Photo**:

Video mode. Video recording




1. Switch to **Video** mode by pressing and holding the **DOWN/REC (2)** button.
2. The  icon and the remaining recording time in HH:MM (Hours:Minutes) format are displayed in the upper left corner, for example 12:10.
3. Press the **DOWN/REC (2)** button briefly to start video recording.
4. When the video recording starts, the icon  will disappear and the REC icon and timer in MM:SS (Minutes:Seconds) format will appear .
5. Pause and resume recording video with a short press of the **DOWN/REC (2)** button.
6. Stop recording video with a long press of the **DOWN/REC (2)** button.
7. Video files are saved to the built-in memory card after the video recording has been stopped.
8. Press and hold the **DOWN/REC (2)** button to switch between the **Video** and **Photomodes** (Video-> Photo-> Video...)

Photo Mode. Capturing an image

1. Switch to the **Photomode** by pressing and holding the **DOWN/REC (2)** button.
2. Press the **DOWN/REC (2)** button briefly to take a photo. The image freezes for 0.5 sec while the photo is saved to the internal memory.

Notes:

- You can enter and operate the menu during video recording;
- The counter for multimedia files cannot be reset;
- Recorded videos and photos are saved to the internal memory card in the format img_xxx.jpg (photos); video_xxx.mp4 (videos) where xxx is a three-digit counter for videos and photos.

Warning:

- The maximum duration of a recorded file is five minutes. After this time expires, a video is recorded into a new file. The number of recorded files is limited by the capacity of the device's internal memory;
- Regularly check the free capacity of the internal memory and move recorded footage to other storage media to free up space on the internal

memory card.





- When the Display Off function is activated, video recording is paused.



Wi-Fi Function

The device has a function enabling wireless communication with external devices (smartphone or tablet) via Wi-Fi.

- Turn on the wireless module in the **Wi-Fi Activation**  menu option.


Wi-Fi is displayed in the status bar as follows:

Connection Status	Indication on the status bar
Wi-Fi is switched off	
Wi-Fi connection is in progress	
Wi-Fi is switched on, no connection with device	
Wi-Fi is switched on, device connected	


- The device is recognized by an external device as AXION_XXXX where XXXX are the four last digits of the serial number.
- After entering the password on the external device (see **Password Setup** subsection of the **Wi-Fi Settings** section for more information on setting a password) and setting up a connection, the icon  in the status bar changes to .


Stadiametric Rangefinder

Show device diagram

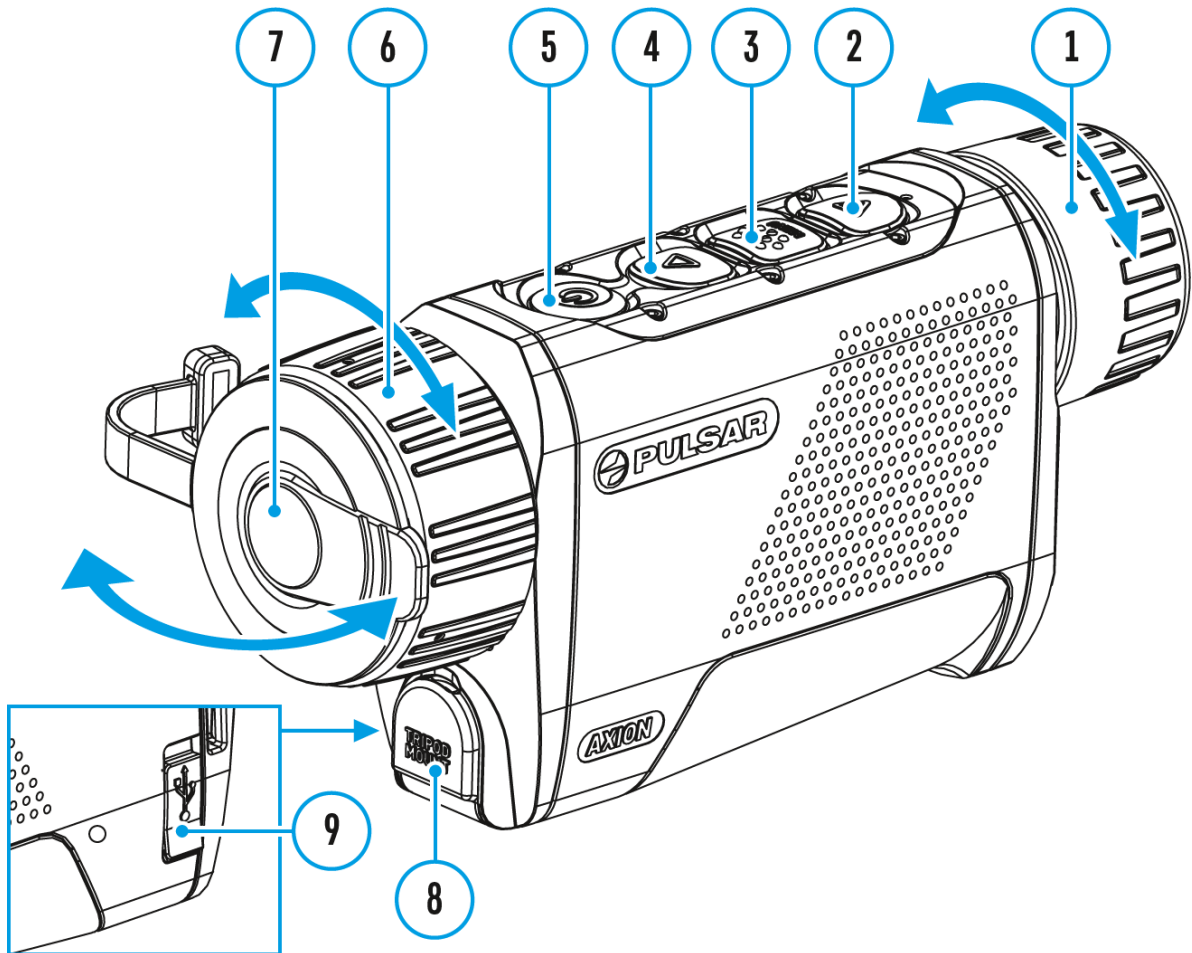

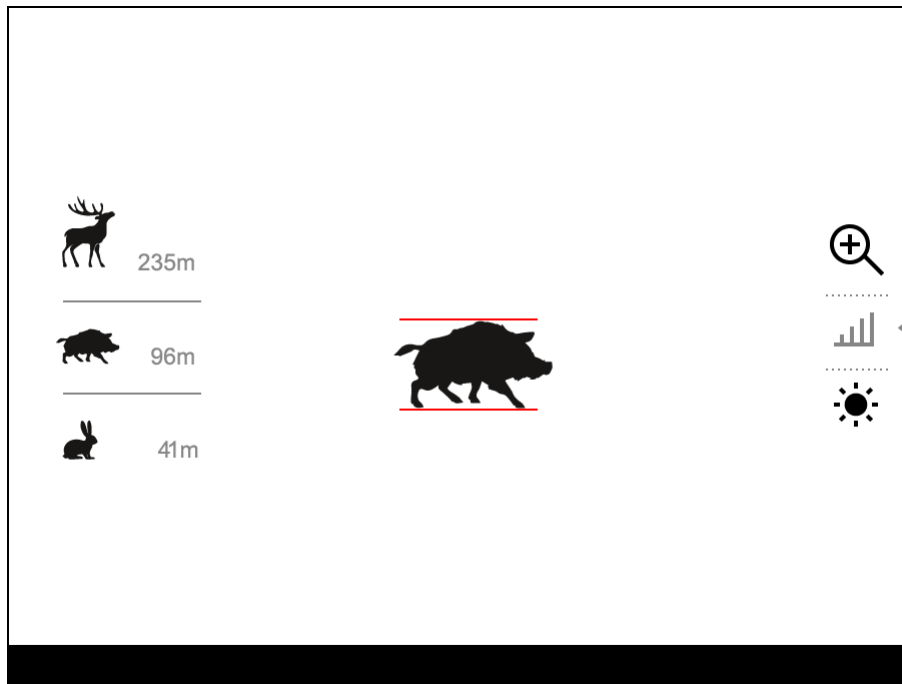

Axion XQ thermal imagers are equipped with a stadiametric rangefinder which allows the user to determine the approximate distance to an object of a known size with reasonable accuracy.




1. Select the **Stadiametric Rangefinder** function with short presses of the **MENU (3)** button until the icon  is selected.
2. You will see on the display: measurement bars, icons of three reference objects and respective distances for the three objects.
3. Position the lower fixed bar under the object being ranged.
4. By pressing the **UP (4) / DOWN (2)** buttons, move the upper horizontal bar relative to the lower fixed bar until the object fits entirely between the two bars. The distance to the object is automatically recalculated as you move the upper line.
5. Exit the rangefinder mode with a long press of the **MENU (3)** button or wait 10 seconds to exit automatically.

Notes:

- There are three predefined values for the reference objects: Hare - 0.3 m height, Boar - 0.7 m height, Deer - 1.7 m height.
- Before it appears on the display, a measured distance value is rounded up to 5m for larger values and rounded down to 1m for smaller values.
- To select the unit of measurement (Meters or Yards), go to the **General Settings**  menu item => **Units of Measure**  submenu.

Display-Off Function

Show device diagram

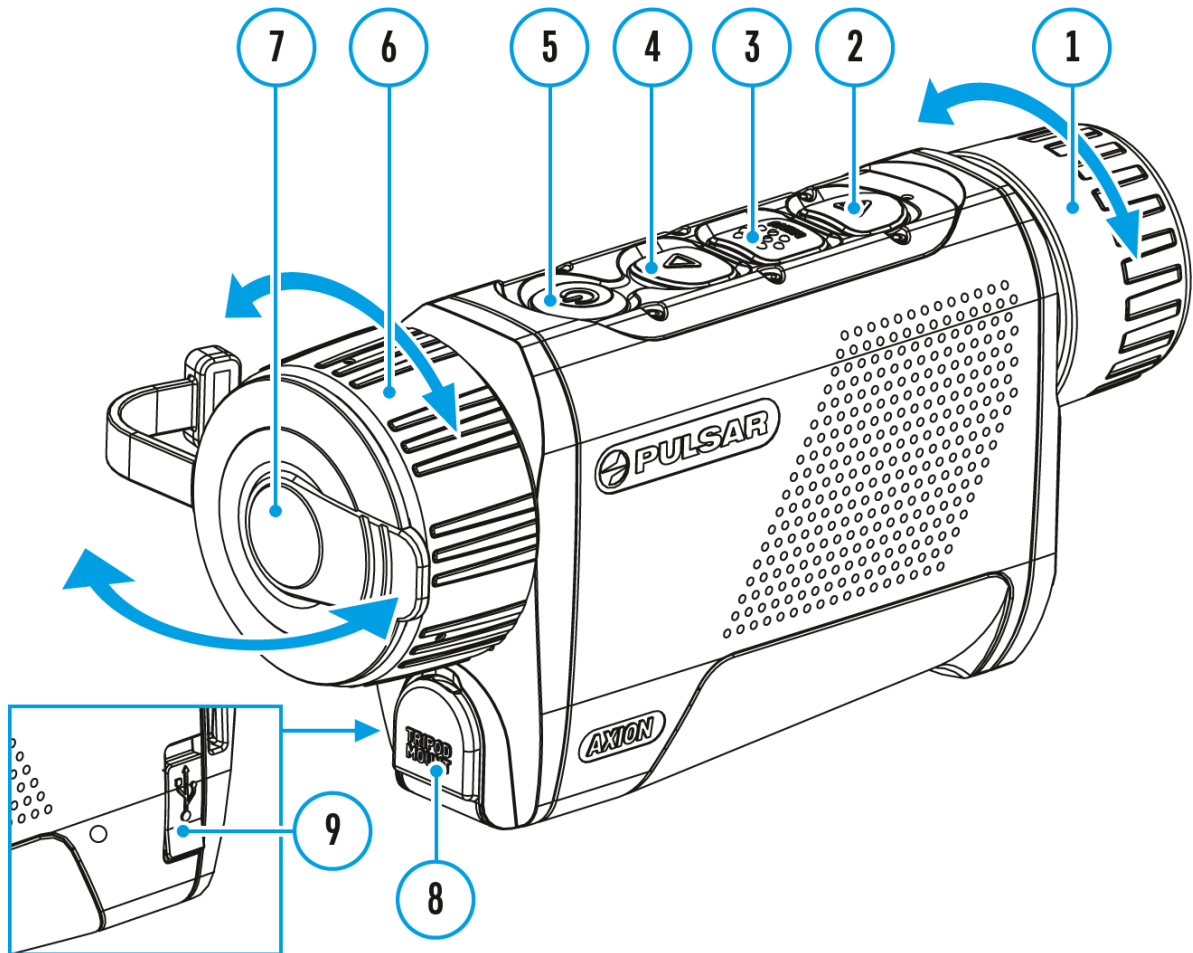

This function deactivates the image transmission to the display by minimizing its brightness. This allows the user to remain unseen. However, the device stays on.

When this function is in use, the device switches to the standby mode, which allows it to be switched on instantly.




00:03

Display off


1. When the device is on, press and hold the **ON/OFF (5)** button. The display goes out and the message **Display Off** appears.
2. Turn the display back on with a short press of the **ON/OFF (5)** button.
3. When you press and hold the **ON/OFF (5)** button, the display shows the message **Display Off** with a countdown. Pressing & holding the button down for the duration of the countdown will power the device off completely.

PiP Function

Show device diagram

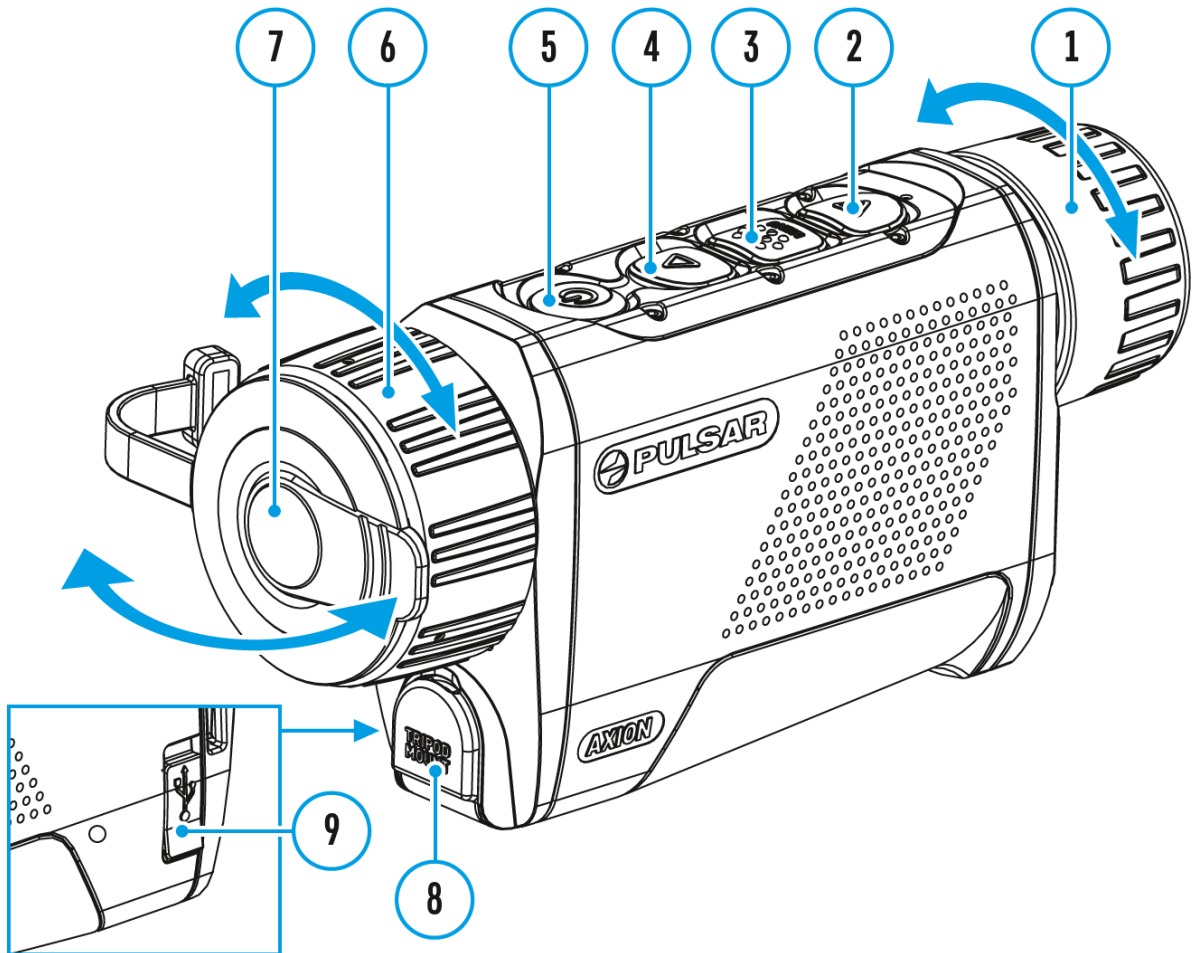


The **PiP** (Picture-in-Picture) function allows you to see both the main image and a magnified image in a dedicated window.

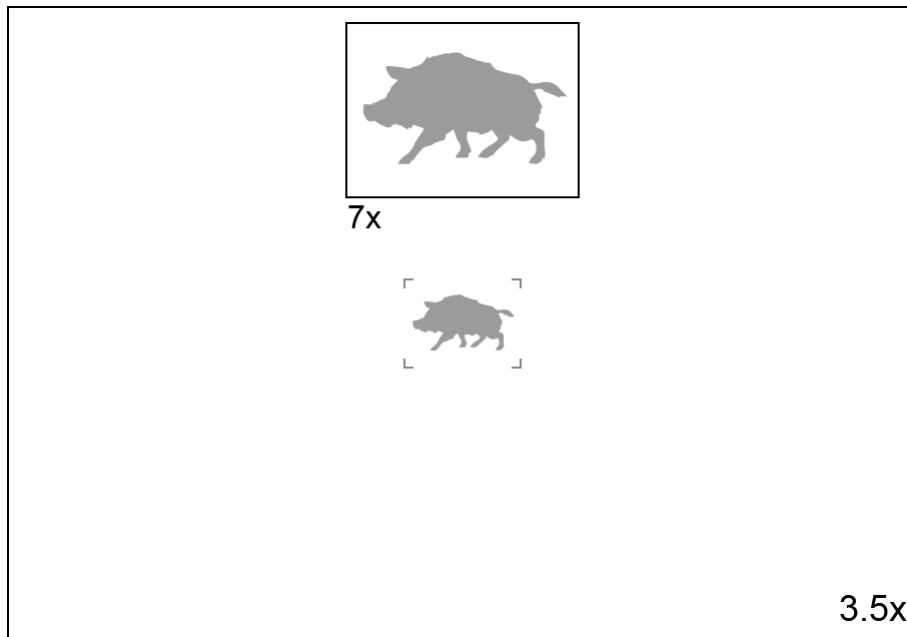

- To turn on and off the **PiP** function see the **PiP Mode** section.
- Press and hold the **UP (4)** button to change the magnification ratio in the **PiP** window.
- The zoomed image is displayed in a dedicated window, while the image in the rest of the screen is displayed at base magnification (3.5x).
- When the **PiP** is turned on you can control both the discrete and smooth digital zoom. In this case the zoom value changes only take place in the dedicated window.
- When the **PiP** function is turned off, the screen will display at the magnification that was set in **PiP** mode.

Stream Vision

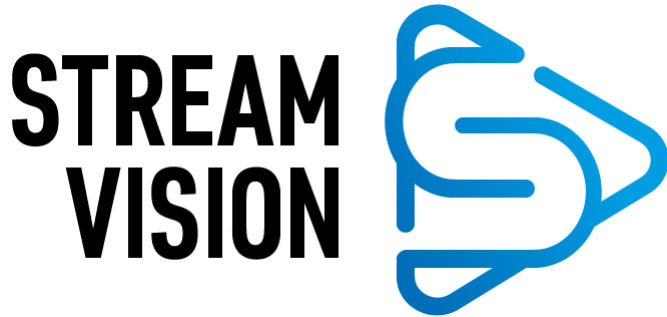

Axion XQ thermal imagers support Stream Vision technology which allows you to stream an image from the thermal imager to a smartphone or tablet in real time via Wi-Fi.

You can find further guidelines on Stream Vision [here](#).

[Download](#) from Google Play

[Download](#) from App Store

Find answers to frequently asked questions about using Stream Vision [here](#).

Firmware Update

Stream Vision

<https://www.youtube.com/embed/0Blu4rr-8IY>

1. Download free of charge Stream Vision App on [Google Play](#) or [App Store](#).
2. Connect your Pulsar device to your mobile device (smartphone or tablet).
3. Launch Stream Vision and go to section "My Devices".
4. Select your Pulsar device and press "Check Updates".
5. Wait for the update to download and install. Pulsar device will reboot and will be ready to operate.

Important:

- if your Pulsar device is connected to phone, please turn on mobile data transfer (GPRS/3G/4G) to download update;
- if your Pulsar device is not connected to your phone but it's already in the "My Devices" section, you may use Wi-Fi to download update.

Find answers to frequently asked questions about using Stream Vision [here](#).

Is your firmware up to date?

Click [here](#) to check the latest firmware for your device.

Stream Vision 2

1. Download free Stream Vision 2 App in [Google Play](#) or [App Store](#).
2. Connect your Pulsar device to your mobile device (smartphone or

tablet).

3. Launch Stream Vision 2 and go to section “Settings”.
4. Select your Pulsar device and press “Check firmware update”.
5. Wait for the update to download and install. Pulsar device will reboot and will be ready to operate.

Important:

- if your Pulsar device is connected to phone, please turn on mobile data transfer (GPRS/3G/4G) to download update;
- if your Pulsar device is not connected to your phone but is already listed in “Settings” > “My devices” section, you may use Wi-Fi to download update.

Find answers to frequently asked questions about using Stream Vision 2 [here](#).

USB Connection

Show device diagram






1. Connect one end of the USB cable to the USB Type-C port **(9)** of your device and the other end to the USB port of your PC / laptop.
2. Turn the device on with a short press of the **ON/OFF(5)** button (a device that has been turned off cannot be detected by your computer).
3. Your device will be detected by the computer automatically; no drivers need to be installed.
4. Two connection modes will appear on the display: **Power** and **Memory Card**(external storage device).
5. Select the connection mode with the **UP (4) / DOWN (2)** buttons.
6. Confirm the selection with a short press of the **MENU (3)** button.

Connection modes:


Power

- In this mode, a PC/laptop is used as an external power supply. The status bar shows the icon . The device continues operating and all functions are available.
- The Battery Pack installed in the device is not being charged.
- When the USB is disconnected from the device when in the **Power** mode, the device keeps operating with the Battery Pack if it is available and sufficiently charged.

Memory Card (external memory)

- In this mode the device is detected by the computer as a flash card. This mode is designed for work with the files saved in the device's memory. The device's functions are not available in this mode; the device turns off automatically.
- If video recording was in progress when the connection was made, recording stops and the video is saved.
- When the USB is disconnected from the device where connection is in the **Memory Card** mode, the device remains in the Off state. Turn the device On for further operation.

Installing the Device on a Tripod

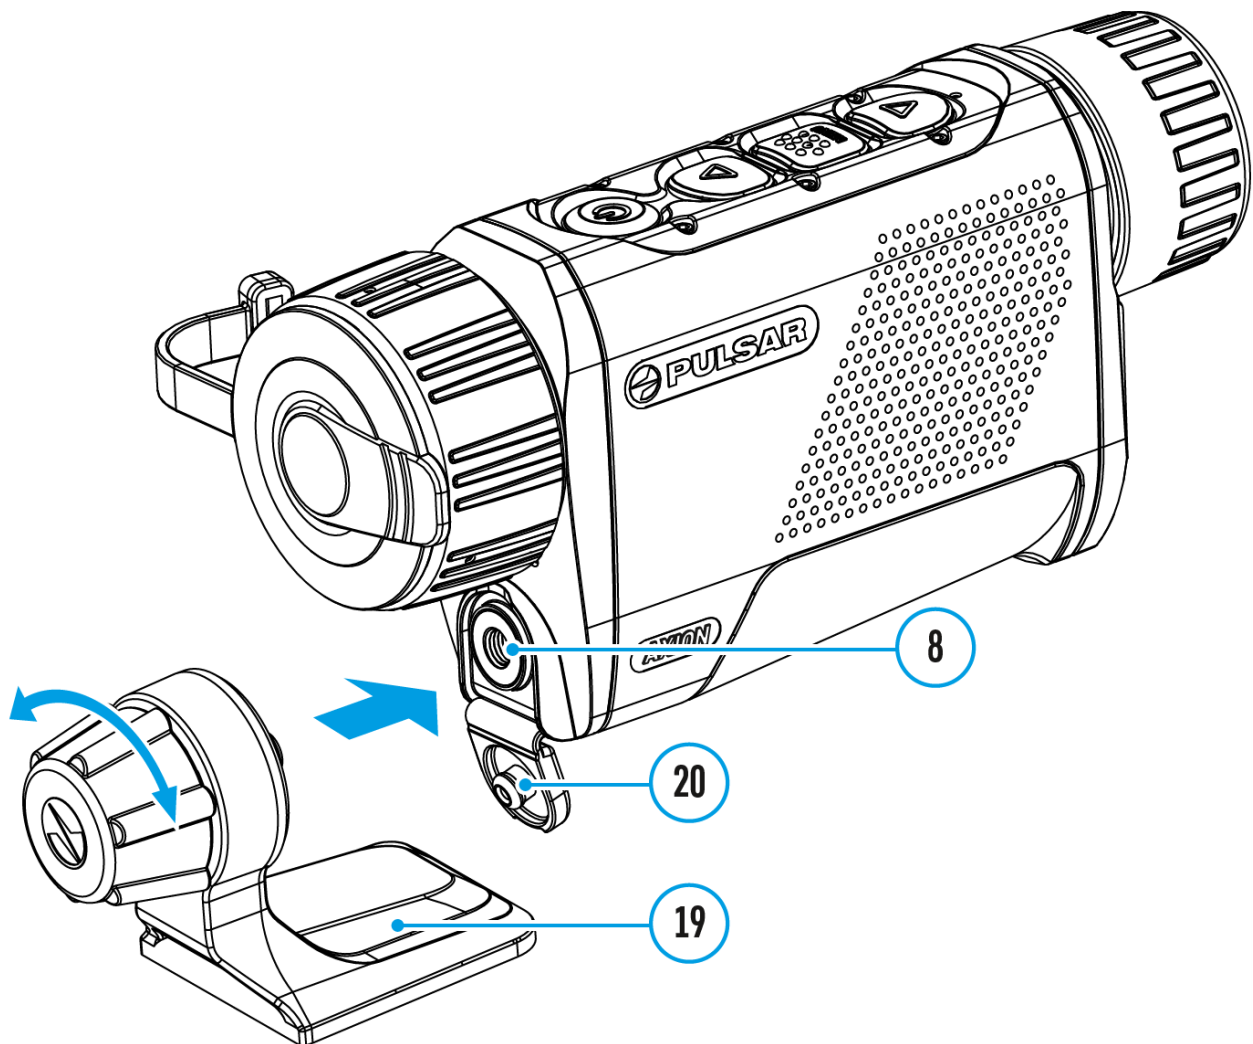

1. Open the cover **(20)** of the socket **(8)**.
2. Attach the tripod adaptor **(19)** to the socket **(8)**.
3. Rotate the adaptor handle clockwise until it stops.
4. Secure the adaptor with the device on a tripod.

Technical Inspection

It is recommended to carry out a technical inspection before each use of the device. Check the following:

- The device appearance (there should be no cracks on the body).
- The condition of the lens and eyepiece (there should be no cracks, grease spots, dirt or other deposits).
- The state of the rechargeable battery (should be charged) and the electric contacts (should be no signs of salts, oxidation or debris).
- The controls should be in working order.

Technical Maintenance and Storage

Maintenance should be carried out no less frequently than twice a year, and should consist of the following measures:

- Wipe external plastic and metal surfaces with a cotton cloth to remove dust and dirt. To avoid damage to the paint coating, do not use chemically active substances, solvents, etc.
- Clean the electric contacts of the Battery Pack and the device's battery slot using a non-greasy organic solvent.
- Check the objective and eyepiece lenses and if required, remove dust and dirt (preferably using a non-contact method). Cleaning of the exterior surfaces of the optics should only be done with products specifically designed for this purpose.
- Store the device in a carrying case. Remove the Battery Pack for long-term storage.

Troubleshooting

For technical support please contact support@pulsar-vision.com.

Answers to frequently asked questions about the devices can also be found in the [FAQ](#) section.

The device does not turn on

Possible cause

Battery Pack is discharged.

Solution

Charge the Battery Pack.

Device malfunction

Solution

In case of any malfunctions during operation, try resetting the device by long pressing the ON/OFF button for 10 seconds.

The device does not operate from an external power source

Possible cause

The USB cable is damaged.

Solution

Replace the USB cable.

Possible cause

The external power supply is discharged.

Solution

Charge the external power supply (if necessary).

The image is blurry, with vertical stripes or an uneven background

Possible cause

Calibration is required.

Solution

Perform the calibration according to [Microbolometer Calibration](#) section.

Black screen after calibration

Solution

If the image does not clear after calibration, you need to recalibrate.

When the device is turned on, the calibration frequency is at first higher, then decreases (if the automatic calibration mode is enabled)

Possible cause

After turning on the device, it takes some time for the sensor temperature to stabilize. This is normal and is not a defect.

Poor quality image. There is noise or ghost images of previous scenes or objects

Possible cause

Manual calibration has been performed with the lens cover open.

Solution

Check the **Calibration Mode**, close the lens cover and **calibrate** the device.

The image is too dark

Possible cause

Brightness or contrast level is too low.

Solution

Adjust the brightness or contrast level in the **Quick Menu**.

Color bars appear on the display or the image disappears

Possible cause

The device was exposed to static electricity during operation.

Solution

After exposure to static electricity, the device may either reboot automatically or require turning off and on again.

The image of the object being observed is missing

Possible cause

You are looking through glass.

Solution

Remove the glass or change the viewing position to avoid it.

Poor image quality / Detection range reduced

Possible cause

These problems may occur during observation in adverse weather conditions (snow, rain, fog, etc.).

Smartphone or tablet PC cannot be connected to the device

Possible cause

Device password has been changed.

Solution

Delete the network and connect again using the password saved in the device.

Possible cause

The device is in an area with too many Wi-Fi networks that may be causing signal interference.

Solution

To ensure a stable Wi-Fi connection, relocate the device to an area with fewer or no Wi-Fi networks.

More information on solving problems with connection to Stream Vision by following the [link](#).

Wi-Fi signal is missing or interrupted

Possible cause

Smartphone or tablet is out of range of a strong Wi-Fi signal. There are obstacles between the device and the smartphone or tablet (e.g., concrete walls).

Solution

Relocate smartphone or tablet into the Wi-Fi signal line of sight.

More information on solving problems with connection to Stream Vision by following the [link](#).

The image quality during the device operation at below zero temperatures is worse than at positive temperatures

Possible cause

Because of variations in thermal conductivity, objects (surrounding environment, background) under observation become warm more quickly at above-zero temperatures, which allows higher temperature contrast, so the quality of the image produced by a thermal imager will be better.

At low operating temperatures, objects under observation (background) normally cool down to roughly identical temperatures, which leads to reduced temperature contrast and to image quality (precision) degradation. This is normal for thermal imaging devices.

Legal Compliances and Disclaimers

Attention! A license is required for Axion Thermal Imager when exporting outside your country.

Electromagnetic compatibility. This product complies with the requirements of European standard EN 55032: 2015, Class A.

Caution! Operation of this equipment in a residential environment could cause radio interference.

Updates of the Product. The manufacturer reserves the right at any time, without mandatory prior notice to the Customer, to make changes to the package contents (subject to the applicable laws, if any), design and characteristics that do not impair the quality of the Product.

Repair. Repair of the product is available within 5 years after purchase of the product.

Limitation of Liability. Subject to mandatory applicable laws and regulations: manufacturer will not be liable for any claims, actions, suits, proceedings, costs, expenses, damages or liabilities (if any), arising out of the use of this product. Operation and use of the product are the sole responsibility of the Customer. Manufacturer's sole undertaking is limited to providing the product(s) and related services in accordance with the terms and conditions of concluded transactions, including provisions established in warranty. The provision of products sold and services performed by Manufacturer to the Customer shall not be interpreted, construed, or regarded, either expressly or implied, as being for the benefit of or creating any obligation toward any third party (other than Distributor, Dealer, Buyer). Manufacturer's liability hereunder for damages, regardless of the form or action, shall not exceed the fees or other charges paid to Manufacturer for the product(s) and/or service(s).

MANUFACTURER WILL NOT BE LIABLE FOR LOST REVENUES OR INDIRECT,

SPECIAL, INCIDENTAL, CONSEQUENTIAL, EXEMPLARY, OR PUNITIVE DAMAGES, EVEN IF THE MANUFACTURER KNEW OR SHOULD HAVE KNOWN THAT SUCH DAMAGES WERE POSSIBLE AND EVEN IF DIRECT DAMAGES DO NOT SATISFY A REMEDY.

